


Raypak Touch Screen

Quick Start User Guide

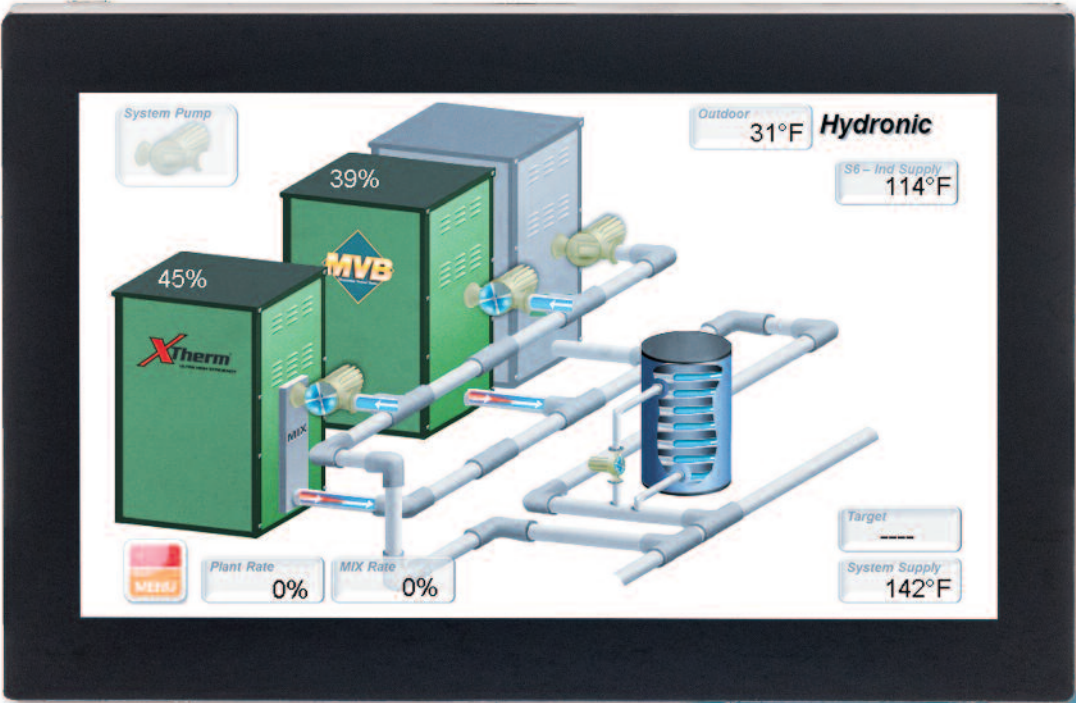

The Raypak Touch

Raypak's capacitive 7" Touch Screen (TS) is the very latest in high-performance, touch screen displays. The Raypak TS has a 7" High Definition WVGA LCD and features a robust capacitive touch panel. The thick protective cover glass, along with the water resistant and glove-enabled touch panel, provides the rugged features required in today's equipment room. The Raypak TS comes with 4GB of onboard flash storage and 4GB of DDR2 SDRAM, allowing for fast rendering of high-resolution images as well as ample storage for monitoring / diagnostic data.

TS MODULE

- 536Mhz ARM A5 Processor
- 4GB of DDR RAM at 166Mhz
- 4GB eMMC Flash and μ SD Card Socket
- Operating Temperature: -20°C (-4°F) to 70°C (158°F)

DISPLAY

- 7" WVGA (16:9 diagonal)
- Luminance: 500 nit (cd/m²)
- Contrast Ratio: 400:1
- Projected Capacitive Touch
- Operates with gloved hands and rejects liquids
- Gestures: Tap, Flick, Scroll, Finger Swipe
- 1.1 mm protective cover glass


Raypak Touch Screen Interface

The TS module has the same basic menu distribution as the original LCD Display. When pressing the menu button the menu bar becomes visible at the bottom of the screen, allowing navigation through four additional sub-menus.

VIEW

There are three selectable View screen types.


- 3D System View
- Master Info or Follower Info
- System View

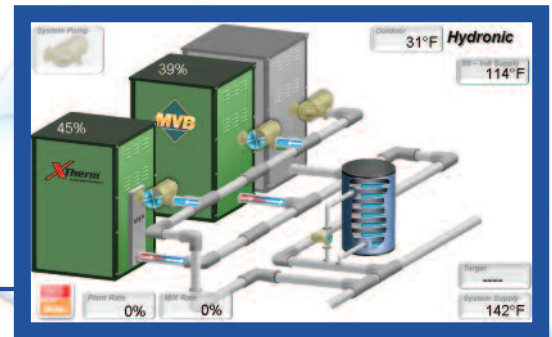

3D System View




View Menu

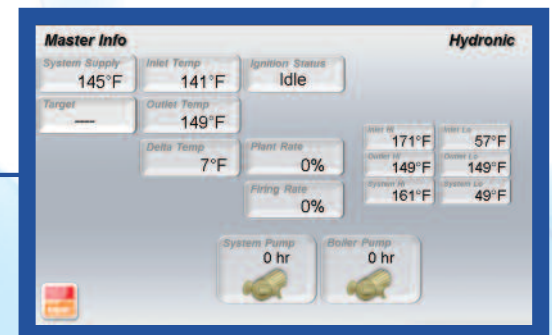

Master Info

The "3D system view" depicts a graphic representation of how piping arrangements should look and gives a close representation of the real installation. The rest of the screens are less graphic but more focused on data from system or local unit perspective.

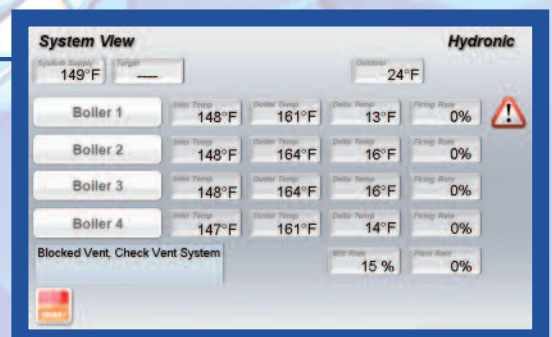


System View

ADJUST

Includes many of the settable parameters. Each adjustable value has a small bar on top or aside the value; a green bar indicates a confirmation, while a red bar means that the value displayed is different from the actual saved value. If the SET button is not pressed within 5 seconds, the value will revert to the previous value.

Some of the sub-screens and/or parameters are dependent on which DIP switches are activated or which mode is active.

- Operation Settings
- System Settings
- MIX Settings
- Indirect Settings
- Outdoor Settings
- Modbus Settings

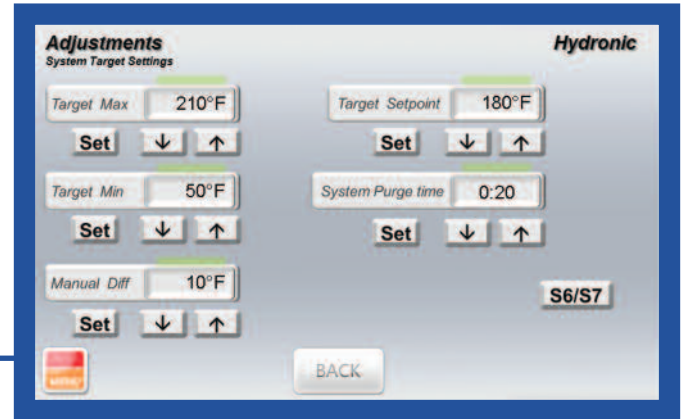


System Settings




Adjust Menu










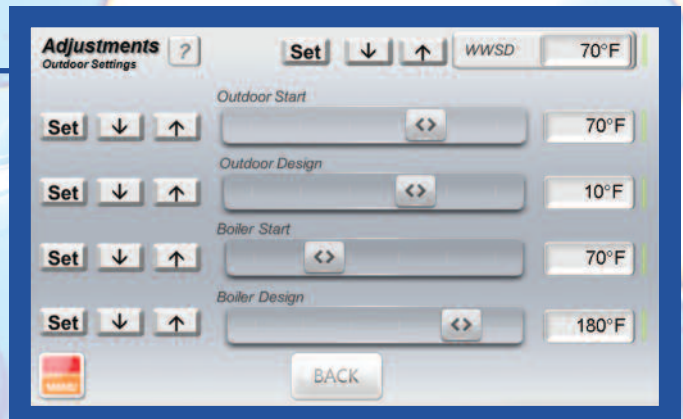

MIX Settings

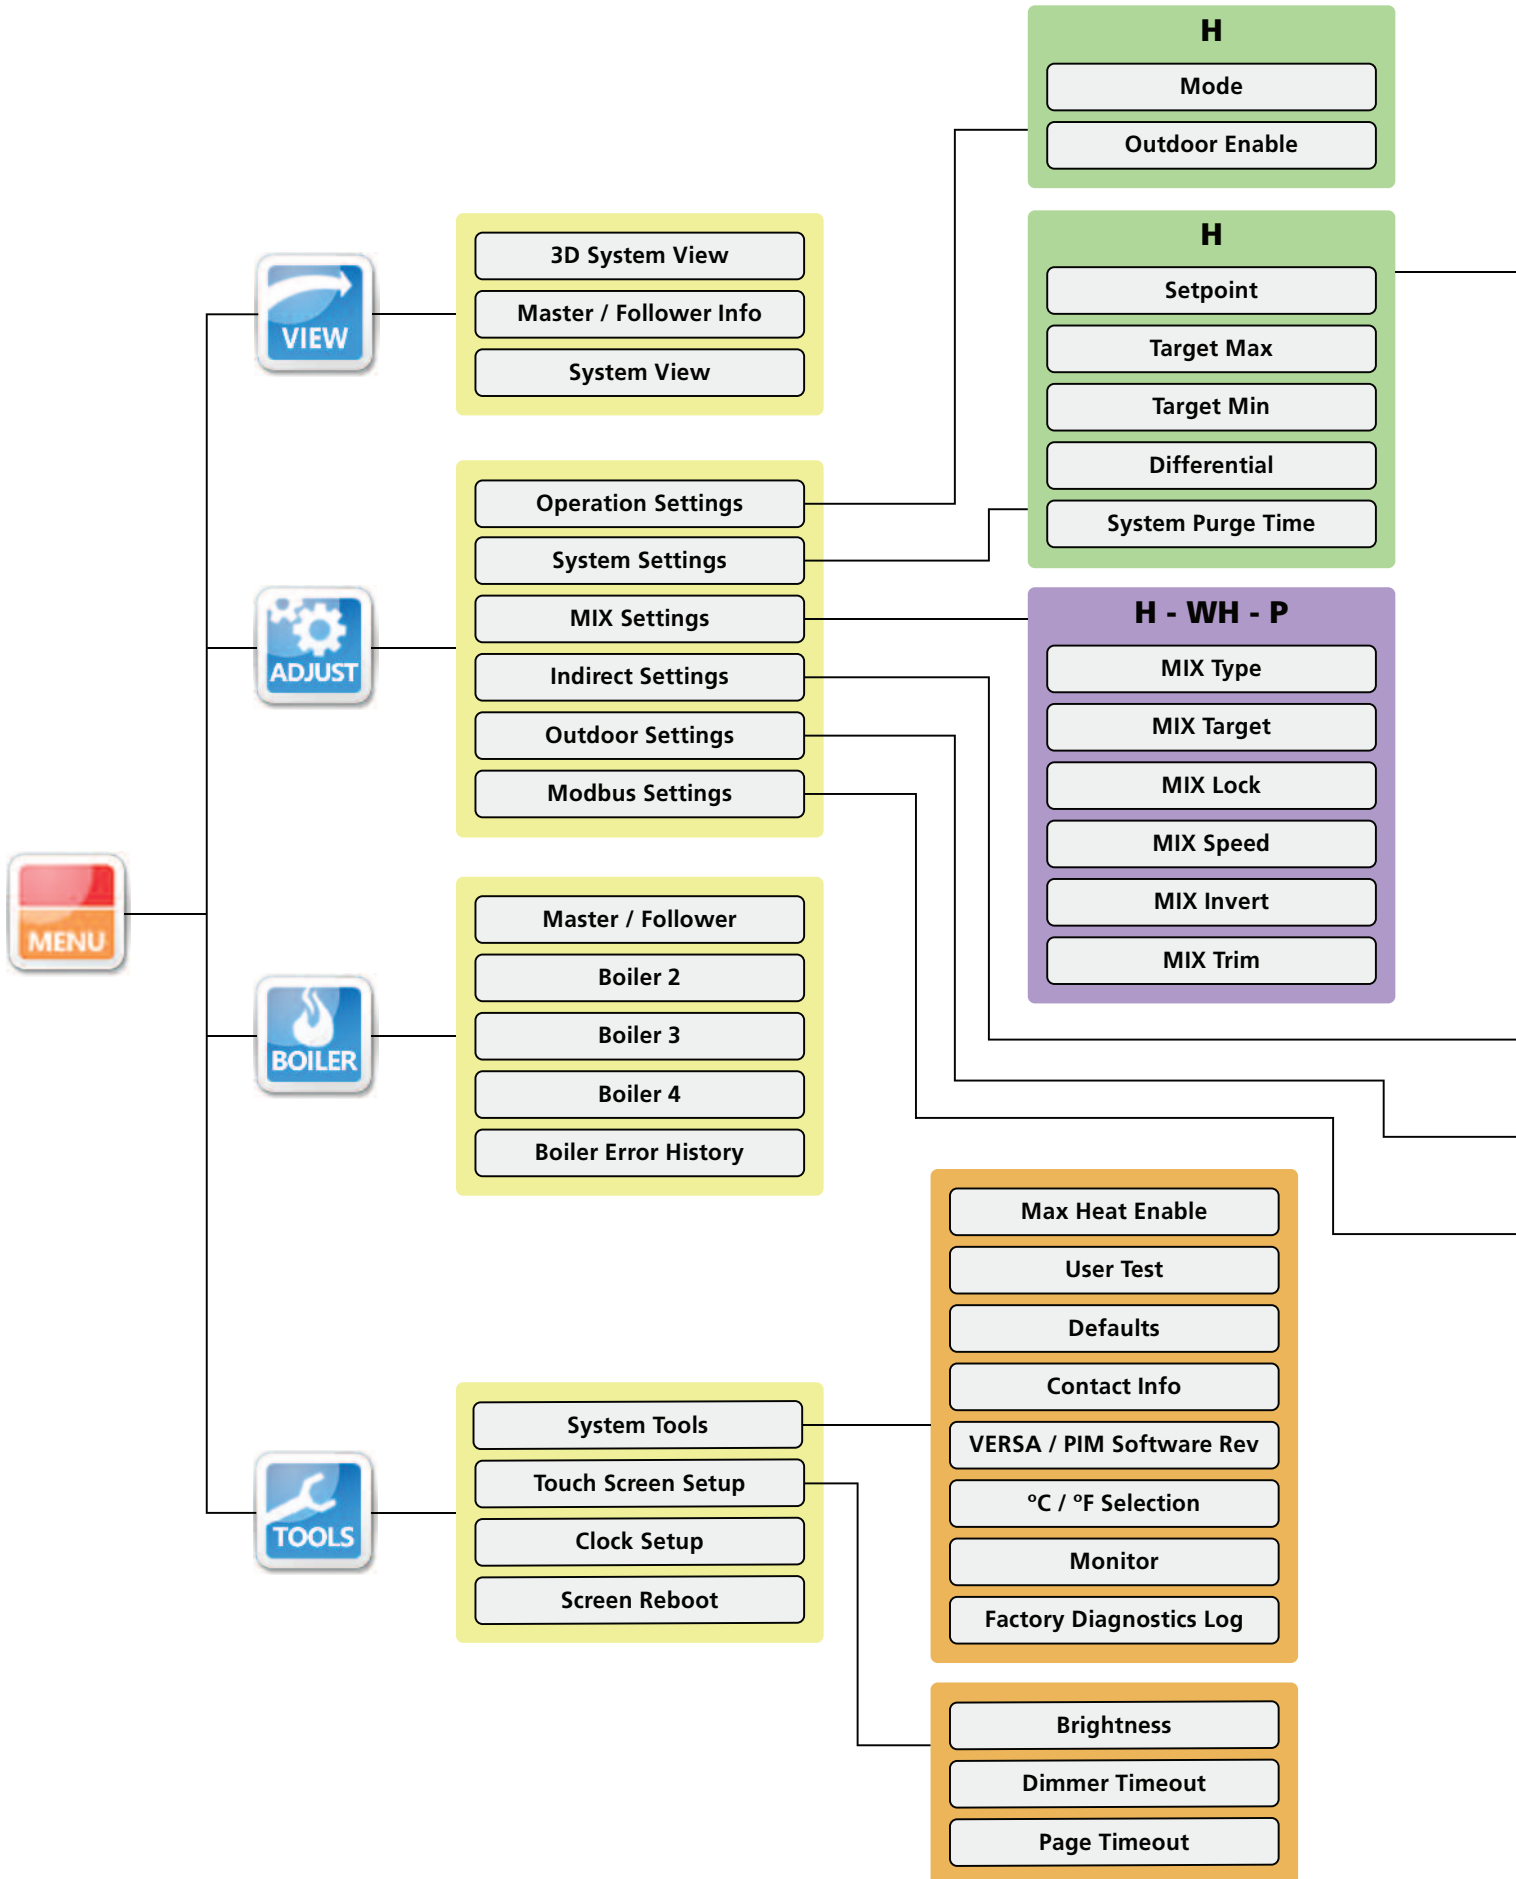

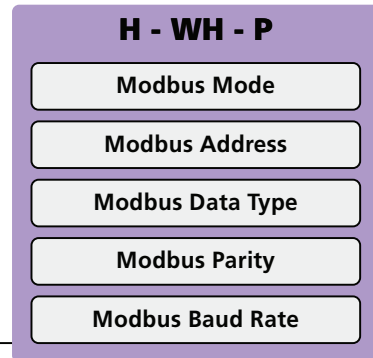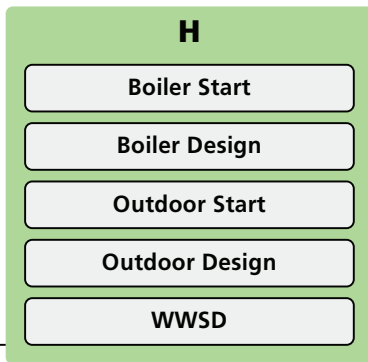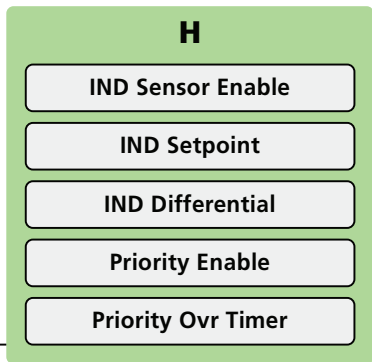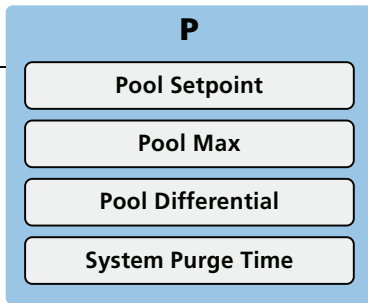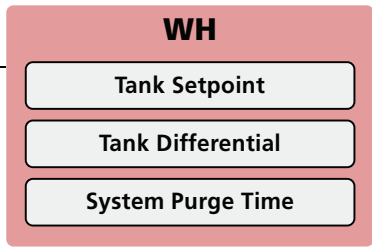Outdoor Settings






MODEL TYPE	
	H
	WH
	P
	H - WH - P

BOILER

Whenever a 3D model of the boiler is included as part of the TS graphic library, the principal BOILER page will include a graphical illustration of the boiler. In addition to multiple data points, active errors will also be highlighted in this page indicating where the problem may be.

Basic readings related to boiler operation are also present by sliding out or tapping on the top, right, and/or bottom bar. BOILER pages also include some adjustable parameters. Boiler Error History, as its name describes, will keep track of the error events of the Master and Follower units present in the cascade. A time stamp will be associated to each error.

- Boiler 1 or Follower
- Boiler 2
- Boiler 3
- Boiler 4
- Boiler Error History

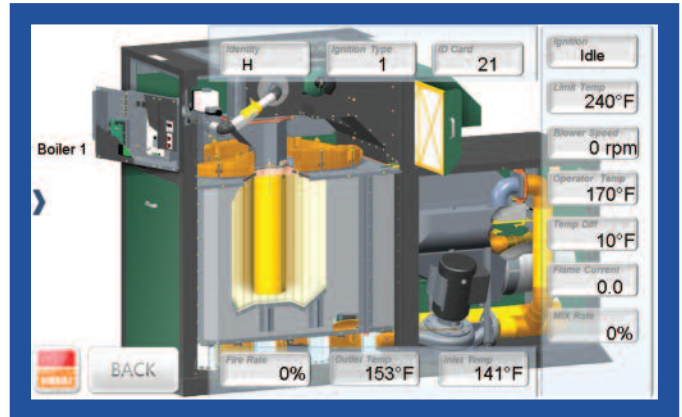

Boiler (Expanded View)



Boiler Menu




Boiler

Error Code	Boiler 1	Description
19 7:58 May 30	Low Gas Pressure, Confirm Settings, Check Gas Supply, Reset L	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	
0	No Error	

DELETE

Boiler Error History

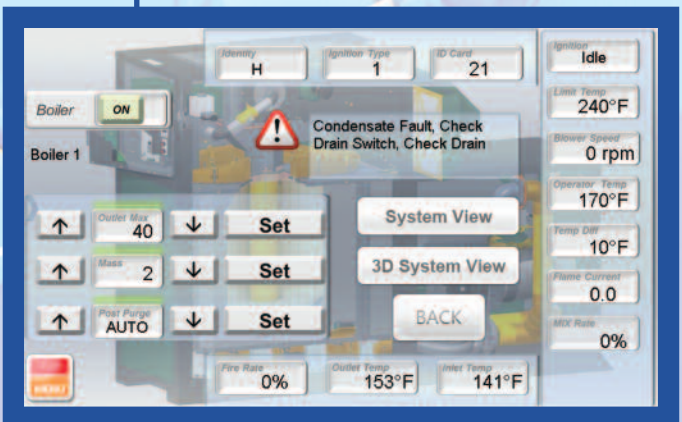


Boiler (Controls View)


TOOLS

Several miscellaneous items can be found in this category for the TS operation, such as dimming out, screen time-out timer, Celsius to Fahrenheit, user test execution, touch screen reboot and Defaults operation.


- System Tools
- Touch Screen Setup
- Clock Setup
- Screen Reboot
- Contact Info

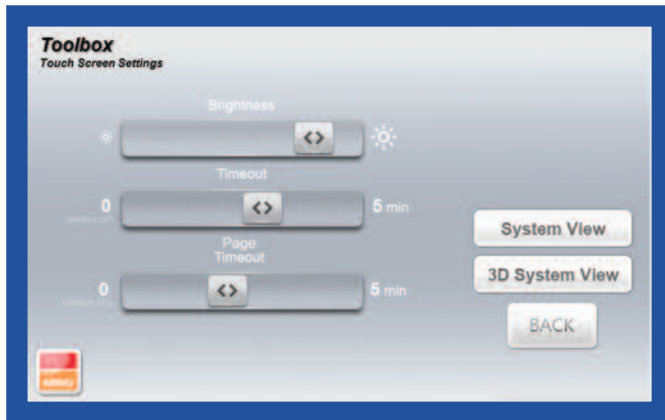


Touch Screen Setup

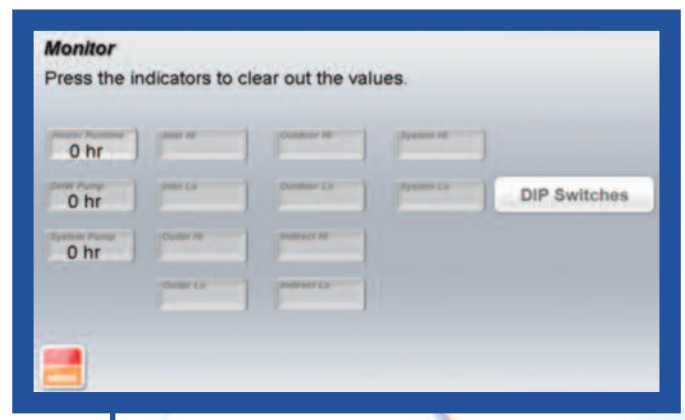


Monitor

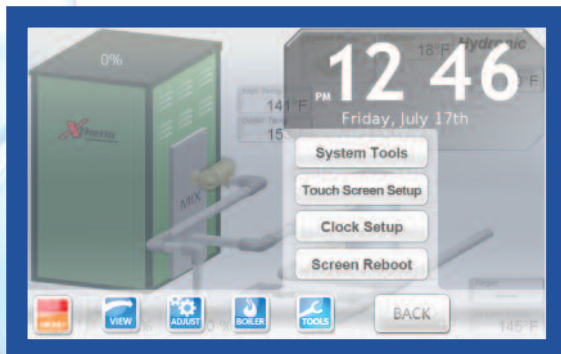


Tools Menu

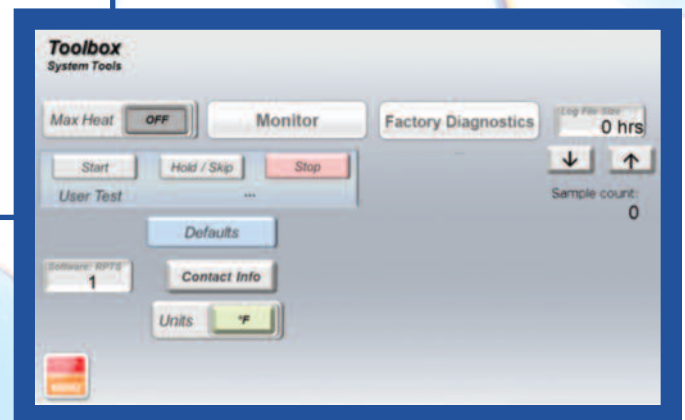

System Tools

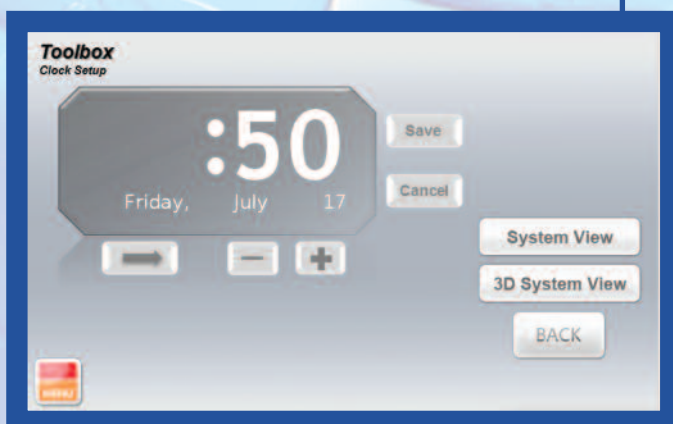

Clock Setup

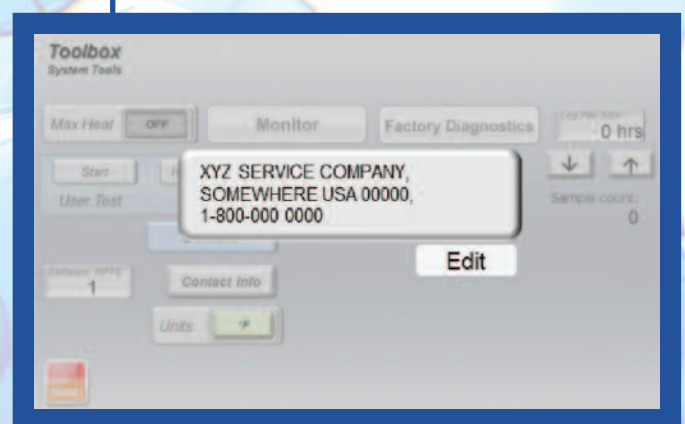

Contact Info
(continue on next page)

CONTACT INFO & PASSWORD

When commissioning the equipment it may be desirable to include contact information for equipment supplier or service company to contact when service is needed. The contact information can be changed by pressing the "Contact" button in the Toolbox menu and then pressing the "Edit" button. Once the "Edit" button is pressed, the "Password" screen will appear, prompting the user to enter a password to allow the contact info to be entered or modified. The default password is "RAYPAKREP".



Password



Edit Contact Info

NOTE: When entering contact info, in lieu of the "ENTER" button, use a comma (,) to separate lines of text.

Example: XYZ Boiler Company,(800) XXX-XXXX

Appears as: XYZ Boiler Company,
 (800) XXX-XXXX

