



REMOTE LEVEL INDICATOR OPTIONS:

PODVIEW LI40
LEVEL INDICATOR:

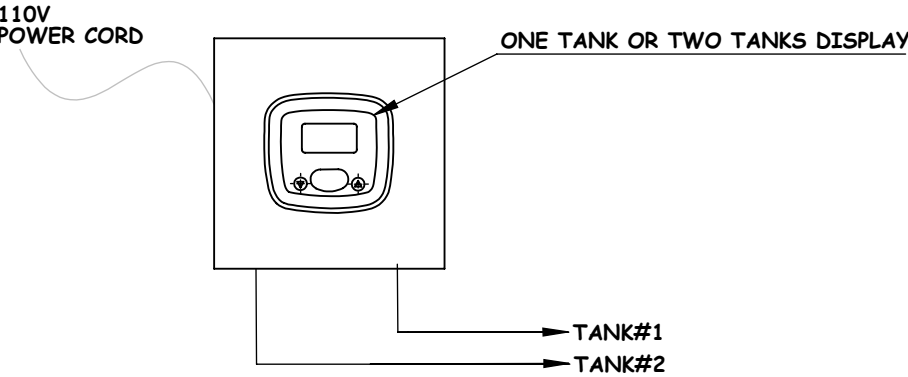


DATAVIEW LI55 LEVEL INDICATOR:

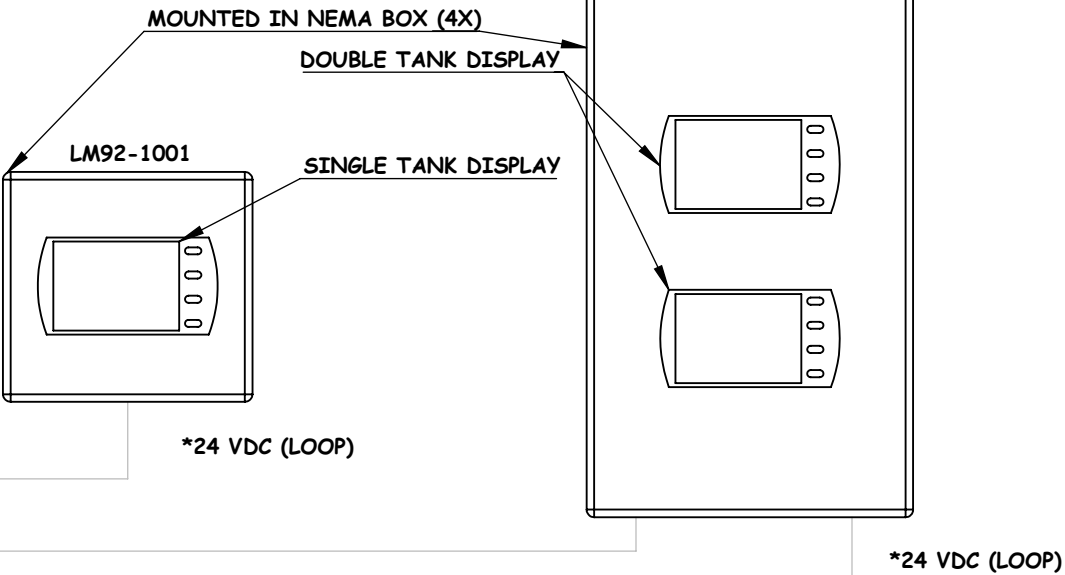


NOTE: SENSORS MUST BE LOCATED
AT CENTER OF TANK.

ECHOPOD DL14:

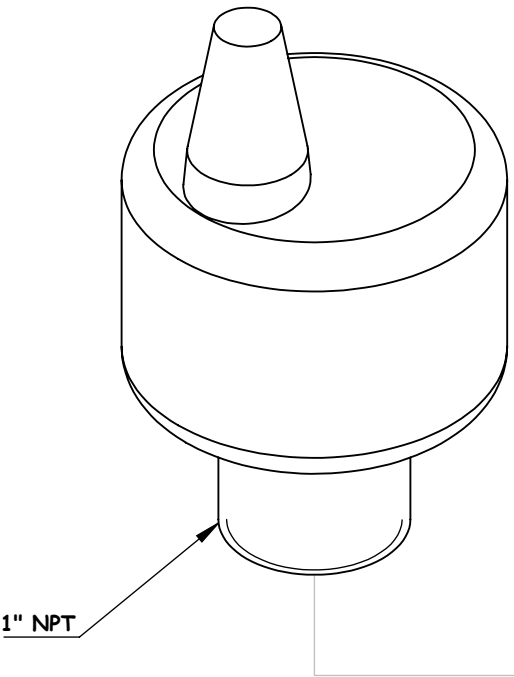

ECHOSONIC LU27 & LU28:

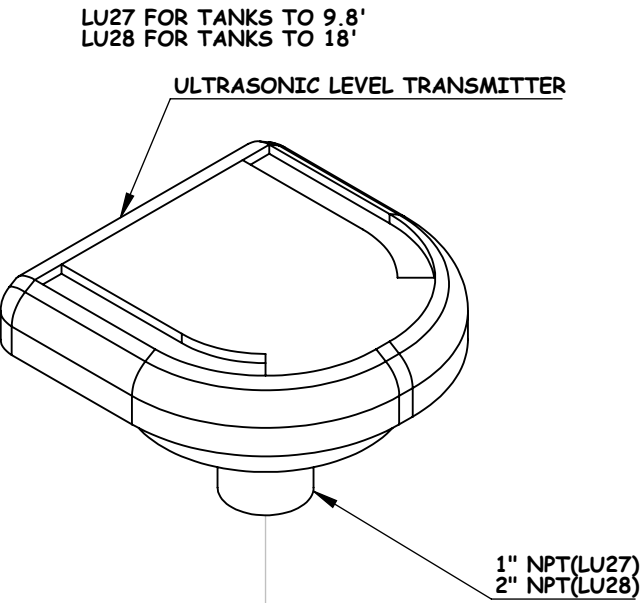

#1
TYPICAL
CHEMICAL
TANK

#2
TYPICAL
CHEMICAL
TANK

***USE THE FOLLOWING TO CONFIGURE EACH SENSOR (PROVIDED AT NO CHARGE):**
USB FOB ADAPTER FOR WEBCAL SOFTWARE.
WEBCAL IS PC BASED SENSOR CONFIGURATION SOFTWARE.

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS
DRAWING IS THE SOLE PROPERTY OF
WATERLINE TECHNOLOGIES. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
WATERLINE TECHNOLOGIES IS
PROHIBITED.

		UNLESS OTHERWISE SPECIFIED:		NAME	DATE	REMOTE LEVEL INDICATOR OPTIONS			
		DIMENSIONS ARE IN INCHES		DRAWN	SS	5/6/16	TITLE: AVAILABLE AT WTI TEL:(714)564-9100		
		TOLERANCES:		CHECKED					
		FRACTIONAL ±		ENG APPR.					
		ANGULAR: MACH ± BEND ±		MFG APPR.					
		TWO PLACE DECIMAL ±		Q.A.					
		THREE PLACE DECIMAL ±		COMMENTS:			SIZE B DWG. NO. Outdoor Fill Box Level Indicator Options A REV		
		INTERPRET GEOMETRIC TOLERANCING PER:							
		MATERIAL							
		FINISH							
NEXT ASSY	USED ON								
APPLICATION		DO NOT SCALE DRAWING					SCALE:	WEIGHT:	SHEET 1 OF 1