

# INSTALLATION & OPERATING INSTRUCTIONS

## ProtoNode RER and ProtoNode LER



(FPC N34)



(FPC N35)



For Interfacing Raypak heating products equipped with the VERSA IC<sup>®</sup> control platform to Building Automation Systems: BACnet MS/TP, BACnet IP, Modbus TCP, Metasys N2, and LonWorks

**Raypak<sup>®</sup>**  
A Rheem<sup>®</sup> Company



**Rev. 2** reflects the following:

**Changes to:** Part number FPC-N34-0636 was FPC-N34-103-126-0636 on pages 6 and 7. Revised table on page 7 (Fig. 4). Revised images on pages: 9, 10, 11, 14, 15, 16, 17, 18, 19 and 24. Revised information on pages: 5, 7, 13 and 14.

**Additions:** New table on page 5 (Fig. 1). New images on page 13.

**Deletions:** None.

---

# Table of Contents

<b>Introduction</b> .....	<b>5</b>
BTL Mark – BACnet Testing Laboratory.....	5
LonMark Certification .....	5
<b>Interfacing the ProtoNode to Raypak Products</b> .....	<b>6</b>
ProtoNode RER (FPC-N34) and LER (FPC-N35) showing connection ports.....	6
<b>BACnet/LonWorks Setup for ProtoCessor ProtoNode RER/LER</b> .....	<b>7</b>
Installation steps for the customer .....	7
Record Identification Data .....	7
Configure Modbus COM Settings on Raypak VERSA IC Products Connected to the ProtoNode RER (FPC-N34) and ProtoNode LER (FPC-N35 LonWorks) .....	7
Select the Desired Field Protocol – BACnet MS/TP and BACnet IP via S Bank DIP Switches .....	7
Using S0 – S3 bank of DIP Switches.....	8
BACnet MS/TP, BACnet/IP, Modbus TCP, and Metasys N2 Settings for ProtoNode RER (FPC-N34 BACnet) .....	8
Installation steps for the customer .....	8
Set BACnet MS/TP, BACnet/IP, Metasys N2, and Modbus TCP; Device Instance (BACnet), Node-ID (N2 and Modbus TCP) and MAC Address for BACnet MS/TP on ProtoNode RER (FPC-N34) .....	8
Setting the Device Instance (Node-ID) for BACnet MS/TP and BACnet/IP on ProtoNode RER (FPC-N34 BACnet).....	8
Setting the Node-ID for Metasys N2 and Modbus TCP on ProtoNode RER (FPC-N34 Metasys N2) .....	8
Setting the MAC Address for BACnet MS/TP for the ProtoNode RER (FPC-N34 BACnet) .....	8
Set Baud Field RS-485 Baud Rate for BACnet MS/TP on ProtoNode RER (FPC-N34 BACnet) .....	9
Setting the Serial Baud Rate (DIP Switch B0 – B3) for BACnet MS/TP.....	9
Wiring Connections to ProtoNode RER (FPC-N34 BACnet) and ProtoNode LER (FPC-N35 LonWorks) .....	10
Connecting the VERSA IC Modbus port to the ProtoNode’s Phoenix 6 pin connector .....	10
Wiring the ProtoNode RER to RS-485 Field Protocol (BACnet MS/TP or Metasys N2) .....	12
Wiring the ProtoNode LER (FPC-N35) Field Port to a LonWorks network .....	12
Power-Up the ProtoNode RER (FPC-N34 BACnet) or ProtoNode LER (FPC-N35 LonWorks) .....	13
<b>Connect to the ProtoNode’s Web Configurator to Setup the Raypak products (Profiles) connected to the ProtoNode RER or LER</b> .....	<b>13</b>
Connect the PC to the ProtoNode via the Ethernet port.....	13
Configure Profiles in the ProtoNode’s Web Configurator.....	15
Selecting the Raypak profiles that will be connected the ProtoNode .....	15
Changing BN_Node_Offset via the ProtoNode’s Web Configurator .....	17
Set IP Address for BACnet/IP via GUI .....	17
<b>Commissioning the ProtoNode LER on a LonWorks network</b> .....	<b>19</b>
Commissioning the ProtoNode LER on a LonWorks network .....	19
Instructions to Upload XIF File From the ProtoNode LER Using FS GUI Web Server .....	19
<b>Chipkin Automation’s CAS BACnet explorer for validating the ProtoNode in the field</b> ....	<b>20</b>
Downloading Chipkin Automation’s CAS Explorer and Requesting an Activation Key .....	20
CAS BACnet Setup .....	21
CAS BACnet MS/TP Setup .....	21
CAS BACnet BACnet/IP Setup .....	21
<b>Appendix A. Troubleshooting</b> .....	<b>21</b>
Appendix A.1. Check Wiring and Settings .....	21
Appendix A.2. Take Diagnostic Capture With the FieldServer Utilities .....	21
Appendix A.3. Setting the Network Number for BACnet IP .....	23
Appendix A.4. LED Diagnostics for Modbus RTU Communications between the ProtoNode and Raypak VERSA IC® .....	23
A.5.1 ProtoNode RER and LER LEDs .....	23
<b>Appendix B. Vendor Information</b> .....	<b>24</b>
Appendix B.1. Raypak VERSA IC Modbus RTU Mappings to BACnet MS/TP, BACnet/IP, Metasys N2, and LonWorks.....	24
Appendix B.2. Address DIP Switch Settings .....	29
<b>Appendix C. Reference</b> .....	<b>33</b>
Appendix C.1. Specifications.....	33
Appendix C.1.1 Compliance with UL Regulations.....	33
<b>Appendix D. Limited 2 year Warranty</b> .....	<b>34</b>


---

# Table of Contents


Figure 1: ProtoNode BACnet RER (BACnet) and ProtoNode LER (LonWorks) .....	6
Figure 2: S0 through S3 DIP Switches .....	8
Figure 3: A0 through A7 DIP Switches .....	9
Figure 4: B0 through B3 DIP Switches .....	9
Figure 5: Power and RS485 pin outs.....	10
Figure 6: VERSA IC Modbus RS485 pin outs to the ProtoNode’s Modbus port .....	10
Figure 7: Multiple VERSA IC Masters.....	11
Figure 8: Connection from ProtoNode to RS-485 Field Protocol –BACnet MS/TP .....	12
Figure 9: End-of-line termination on from ProtoNode to RS-485 Field Protocol – BACnet MS/TP.....	12
Figure 10: LonWorks Terminal .....	12
Figure 11: Power pin outs to the ProtoNode.....	13
Figure 12: Ethernet port location of ProtoNode .....	13
Figure 13: Local Area Connection Properties .....	13
Figure 14: Internet Protocol Version 4 .....	14
Figure 15: Internet Protocol Address .....	14
Figure 16: Web Configurator showing the active profiles to select from .....	15
Figure 17: Web Configurator showing a profile selected.....	16
Figure 18: Web Configurator showing a completed profile added .....	16
Figure 19: Web Configurator showing multiple completed profiles added .....	17
Figure 20: Default FS Web GUI Landing Page .....	18
Figure 21: ProtoNode Network Settings Tab .....	18
Figure 22: ProtoNode LER Commissioning Hole Location.....	19
Figure 23: Sample of Fserver.XIF file being generated .....	19
Figure 24: Chipkin Account Activation .....	20
Figure 25: ProtoNode Ethernet Location .....	21
Figure 26: Setting the Network Number for BACnet IP .....	24
Figure 27: Diagnostic LEDs Location and Description .....	24
Table A: Offered Configurations .....	5
Table B: Modbus RTU COM settings for the Raypak VERSA IC control platform .....	7
Table C: “S” Bank DIP Switch Settings.....	8
Table D: “B” Bank DIP Switch Settings.....	9


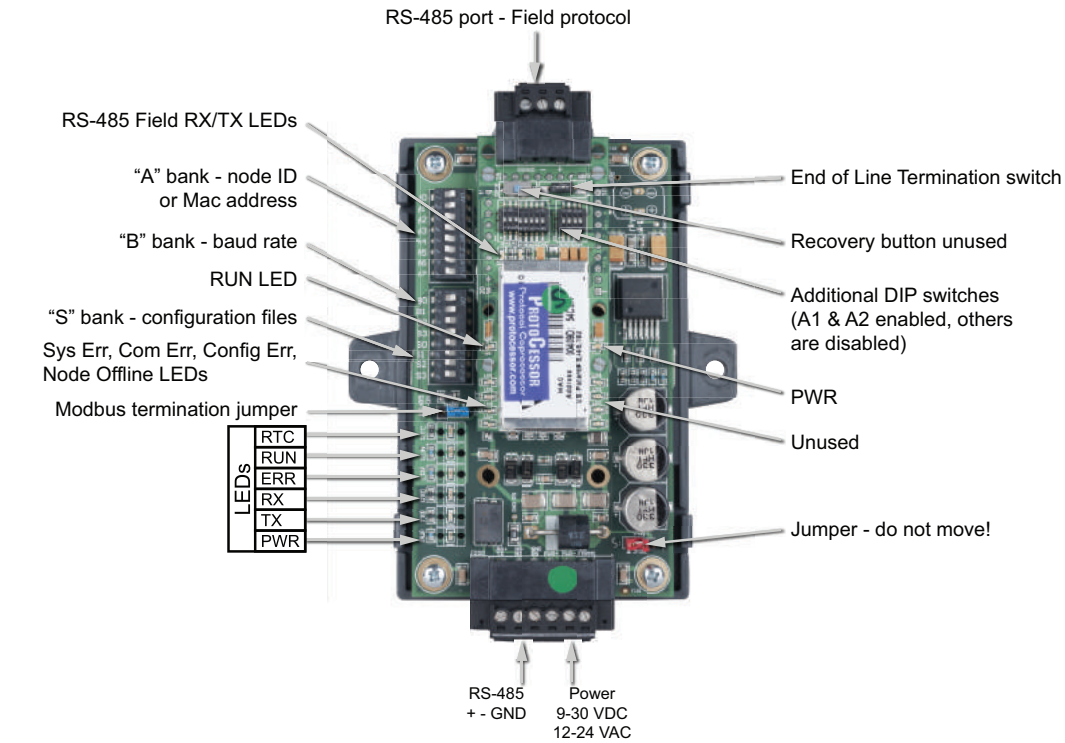
# ProtoNode RER (FPC-N34) and LER (FPC-N35) showing connection ports



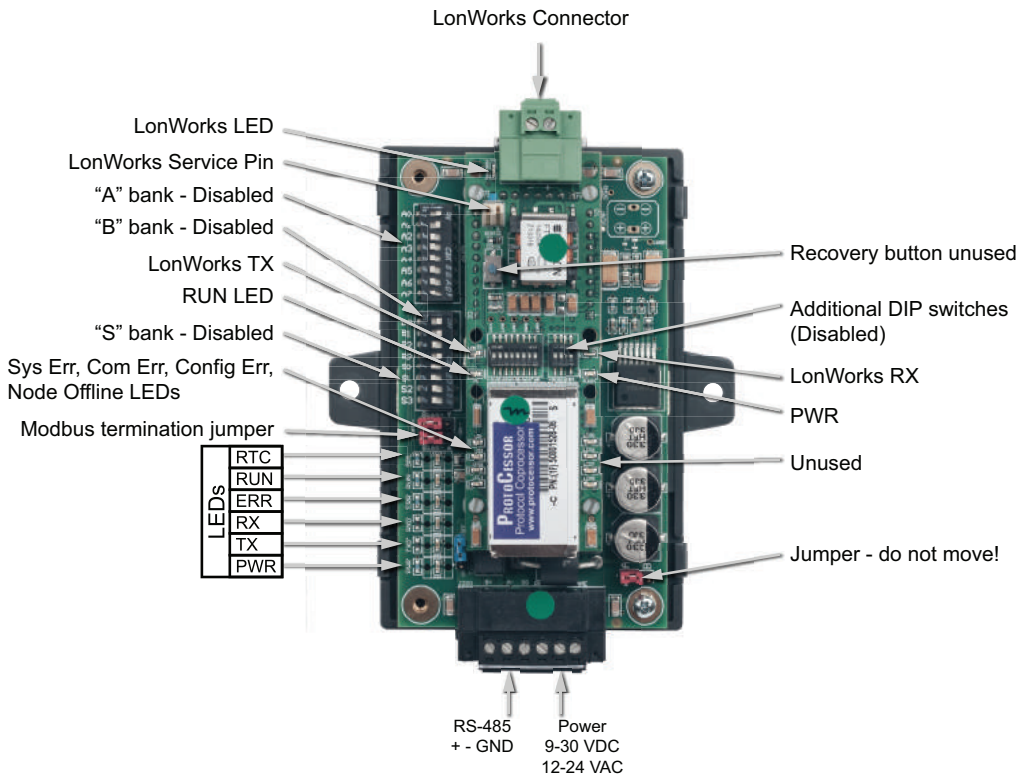6 pin connector - RS-485 Modbus and power connection



6 pin connector - RS-485 Modbus and power connection

Fig. 1: ProtoNode BACnet RER (BACnet) and ProtoNode LER (LonWorks)

## BACNET/LONWORKS SETUP FOR PROTOCESSOR PROTONODE RER/LER

Connects only to a master unit, not a follower. Follow these instructions step-by-step for successful commissioning of the device.

### Installation steps for the customer

- 1 Record identification data. (See page 6)
- 2 Set the Raypak VERSA IC Modbus RTU serial settings (i.e baud rate, parity, stop bits) and Modbus Node-ID's for each VERSA IC Master that will be connected to the ProtoNode FPC-N34 or FPC-N35. (See Table A)
- 3 Select the Field Protocol (BACnet MS/TP, BACnet IP, Modbus TCP or Metasys N2) on the S Bank Dip Switches on the FPC-N34-0636. (See Fig. 2)
- 4 Set BACnet device address for the ProtoNode RER (FPC-N34). (See pages 8-9)
- 5 Set Metasys N2 Node-ID. (See page 7)
- 6 If using BACnet MS/TP, Set B bank of DIP switches to set the baud rate on ProtoNode RER (FPC-N34). (See Fig. 4 & Table D)
- 7 Connect the ProtoNode's 3 pin RS-485 port to the Field Protocol cabling. (See Fig. 8)
- 8 Connect each of the Raypak devices to the RS-485 Modbus RTU port to the ProtoNode's RS-485 interface which is located on the 6 pin connector of the ProtoNode (FPC-N34 and FPC-35). (See Fig. 5-7)
- 9 Connect Power to the ProtoNode RER or LER. (See Fig. 11) Raypak recommends a dedicated power supply be used to power the ProtoNode.
- 10 Follow instructions at page 13 to use web configurator.
- 11 Use Web-Configurator to select the Raypak products that will be attached to the ProtoNode and set the current Modbus Node-ID for each these products. Once the Raypak products are selected, the ProtoNode Automatically builds and downloads the Configuration for the specific application. (See pages 15-16)
- 12 Where the Field protocol is BACnet/IP or Modbus TCP, run the ProtoNode web GUI utility program to change the IP address. No changes to the configuration file are necessary. (See pages 17-18)
- 13 Commission the ProtoNode on the LonWorks Network. This needs to be done by the LonWorks administrator using a LonWorks Commissioning tool. (See page 19)

### Record Identification Data

Each ProtoNode has a unique part number located on the underside of the unit. The numbers are as follows:

- FieldServer part # FPC-N34-0636:VERSA IC to BACnet MS/TP, BACnet/IP, Modbus TCP, Metasys N2.
- FieldServer part # FPC-N35-103-401-0637: VERSA IC to LonWorks.

This number should be recorded, as it may be required for technical support.

### Configure Raypak VERSA IC Modbus COM Settings

- All Raypak VERSA IC Master units connected to the ProtoNode MUST ALL have the same Baud Rate, Data Bits, Stop Bits, and Parity. (See Fig. 2) These settings have no impact on the BMS portion of the Protonode communication and only are used to connect between the Versa IC Master and the Protonode.
- Set Modbus Node-ID's (Address) for each of the Raypak VERSA IC Master units attached to the ProtoNode. The Modbus Node-ID's need to be uniquely assigned between 1 and 127.
  - The Modbus Node-ID's that are assigned for each Raypak VERSA IC Master unit needs to be noted for later use when assigning Node-ID's in the web configurator. (See Fig. 20 on page 15)
  - The Metasys N2 and Modbus TCP Node-ID will be set to same value as the Node-ID of the Modbus RTU device.

Serial Port Setting	VERSA IC
Baud Rate	19K2 (19200)
Data Bits	8
Stop Bits	1
Parity	Even

**Table B: Modbus RTU COM settings for the Raypak VERSA IC control platform**

### Select the Desired Field Protocol – for ProtoNode RER (FPC-N34)

## Using S0 – S3 bank of DIP Switches

- The S bank of DIP switches, S0 – S3 are used to select the BACnet MS/TP, BACnet/IP, Modbus TCP, or Metasys N2 on the ProtoNode RER (FPC-N34-0636).
- The S bank of DIP switches on ProtoNode LER (FPC-N35-103-401-0730 - LonWorks) is disabled.

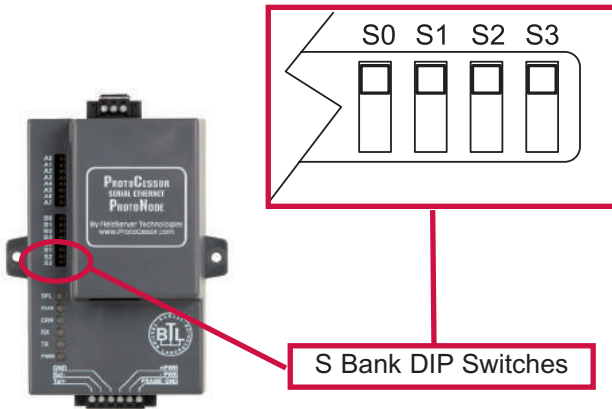


Fig. 2: S0 through S3 DIP Switches

## BACnet MS/TP, BACnet/IP, Modbus TCP, and Metasys N2 Settings for ProtoNode RER (FPC-N34)

### Installation steps for the customer

The following chart describes S0 - S3 DIP switch configuration settings for the Raypak products to support BACnet MS/TP or BACnet/IP on a ProtoNode RER (Part # FPC-N34-0636).

- When the S bank of switches are all off (default setting) BACnet IP is enabled

ProtoNode RER FPC-N34-0636	ProtoNode S Bank DIP Switches			
Profile	S0	S1	S2	S3
BACnet IP	Off	Off	Off	Off
BACnet MS/TP	On	Off	Off	Off
Modbus TCP	Off	On	Off	Off
Metasys	On	On	Off	Off

Table C: "S" Bank DIP Switch Settings

## Setting the Device Instance (Node-ID) for BACnet MS/TP and BACnet/IP on ProtoNode RER (FPC-N34)

- BACnet IP/BACnet MSTP Addressing: The BACnet device instances will be set by taking the BN\_Node\_Offset found in Web Configurator (See page 15) and added to each Modbus RTU device address set on the Raypak VERSA IC Master units attached to the ProtoNode.
  - 50000 is the default
  - If one of the Raypak VERSA IC Master units Modbus RTU node addresses were set for 10, then the device instance would be 50010.
  - If the 2nd Device is Modbus address set 2 then the device instance will be set to 50002.
  - To change the BN\_Node\_Offset (See page 17). The node offset can be changed from 50000 to some other number via the Web Configurator.

## Setting the Node-ID for Metasys N2 and Modbus TCP on ProtoNode RER (FPC-N34)

- Metasys N2 and Modbus TCP Node-ID Addressing: Metasys N2 and Modbus TCP Node-ID's range from 1-127. The Metasys N2 and Modbus TCP Node-ID will automatically set to the same value as the Node-ID (Address) of the Raypak VERSA IC Master units. Do not use ID values over 127.

## Setting the MAC Address for BACnet MS/TP for the ProtoNode RER (FPC-N34)

- Only 1 MAC address is set for the ProtoNode regardless of how many Raypak devices are connected to the ProtoNode.
- Set the BACnet MS/TP MAC addresses between 1 to 127. This is so that the BMS Front End can find the ProtoNode.
- Addresses from 128 to 255 are Slave Addresses and cannot be discovered by BMS Front Ends that support auto discovery of BACnet MS/TP devices. Never set a BACnet MS/TP MAC Address from 128 to 255.
- Set DIP switches A0 – A7 to assign MAC Address for BACnet MS/TP for the first Raypak device attached to the ProtoNode.
- Please refer to Appendix B.2 for the full range of addresses to set Node-ID/Device Instance.
- When using Metasys N2 and Modbus TCP, the A Bank of DIP switches are disabled and not used. They should be set to OFF.



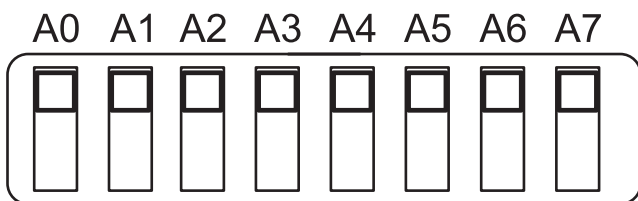


Fig. 3: A0 through A7 DIP Switches

**NOTE:** When setting DIP switches, please ensure that power to the board is OFF.

### Set Field RS-485 Baud Rate for BACnet MS/TP on ProtoNode RER (FPC-N34)

The serial baud rate setting has no impact on the communication baud rate between the Versa IC Master and the Protonode. The serial baud rate and Versa IC baud rate are not required to match for communication to take place. The Versa IC Master baud rate must always be set for 19K2 (19200) to allow communication between the Versa IC Master and the Protonode.

#### Setting the Serial Baud Rate (DIP Switch B0 – B3) for BACnet MS/TP

- DIP Switches B0 – B3 can be used to set the serial baud rate to match the baud rate provided by the Building Management System for BACnet MS/TP.
- DIP Switches B0 – B3 are disabled on ProtoNode LER (FPC-N35 LonWorks).
- The rate on the ProtoNode for Metasys is set for 9600. DIP Switches B0 – B3 are disabled for Metasys N2 on ProtoNode RER (FPC-N34).

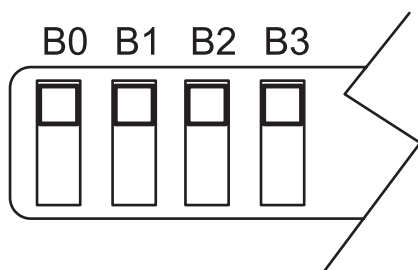


Fig. 4: B0 through B3 DIP Switches

Baud	B0	B1	B2	B3
9600	On	On	On	Off
19200	Off	Off	Off	On
38400	On	On	Off	On
57600	Off	Off	On	On
76800	On	Off	On	On

Table D: “B” Bank DIP Switch Settings

## Wiring Connections to ProtoNode RER (FPC-N34 BACnet) and ProtoNode LER (FPC-N35 LonWorks)

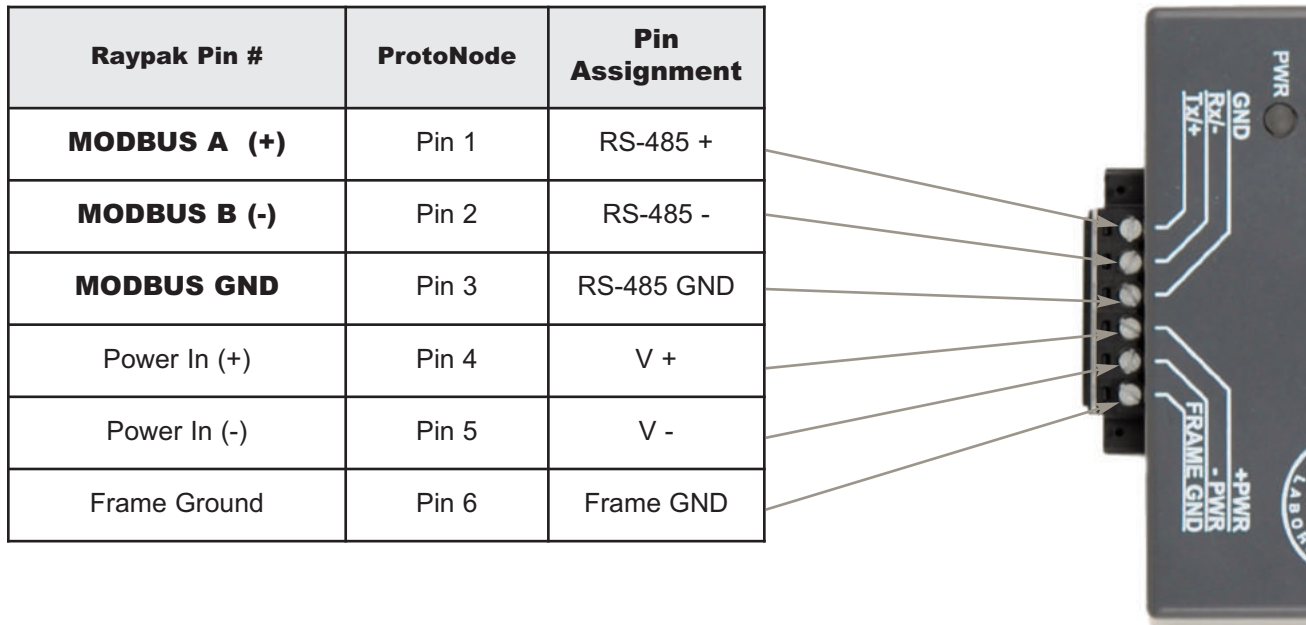


Fig. 5: Power and RS485 pin outs

## Connecting the VERSA IC Modbus port to the ProtoNode's Phoenix 6 pin connector.

- Connect VERSA IC Modbus pin A (RS485+) to the ProtoNode's pin 1 (RS485+) on the Phoenix 6 pin connector.
- Connect VERSA IC Modbus pin B (RS485-) to the ProtoNode's pin 2 (RS485-) on the Phoenix 6 pin connector.
- Connect VERSA IC Modbus pin GND (Ground) and the ProtoNode's pin 3 (Signal Ground) on the Phoenix 6 pin connector.


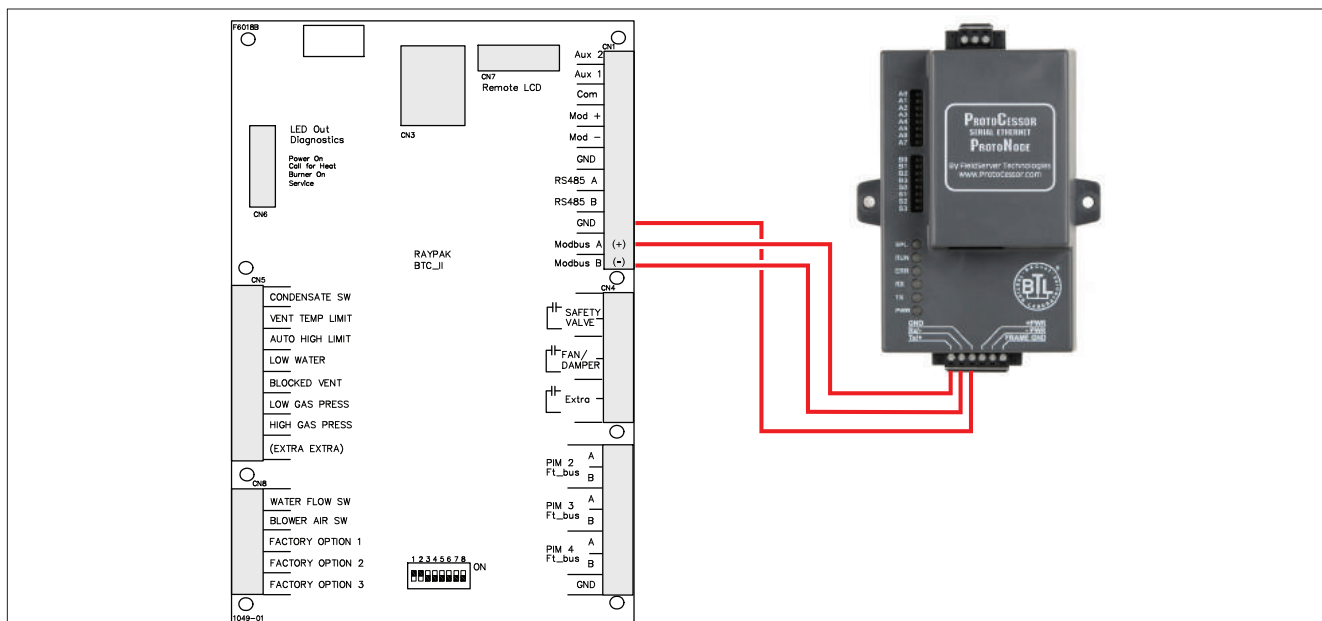


Fig. 6: VERSA IC Modbus RS485 pin outs to the ProtoNode's Modbus port

**NOTE:** Multiple Master configuration requires each Master to have different ID's.

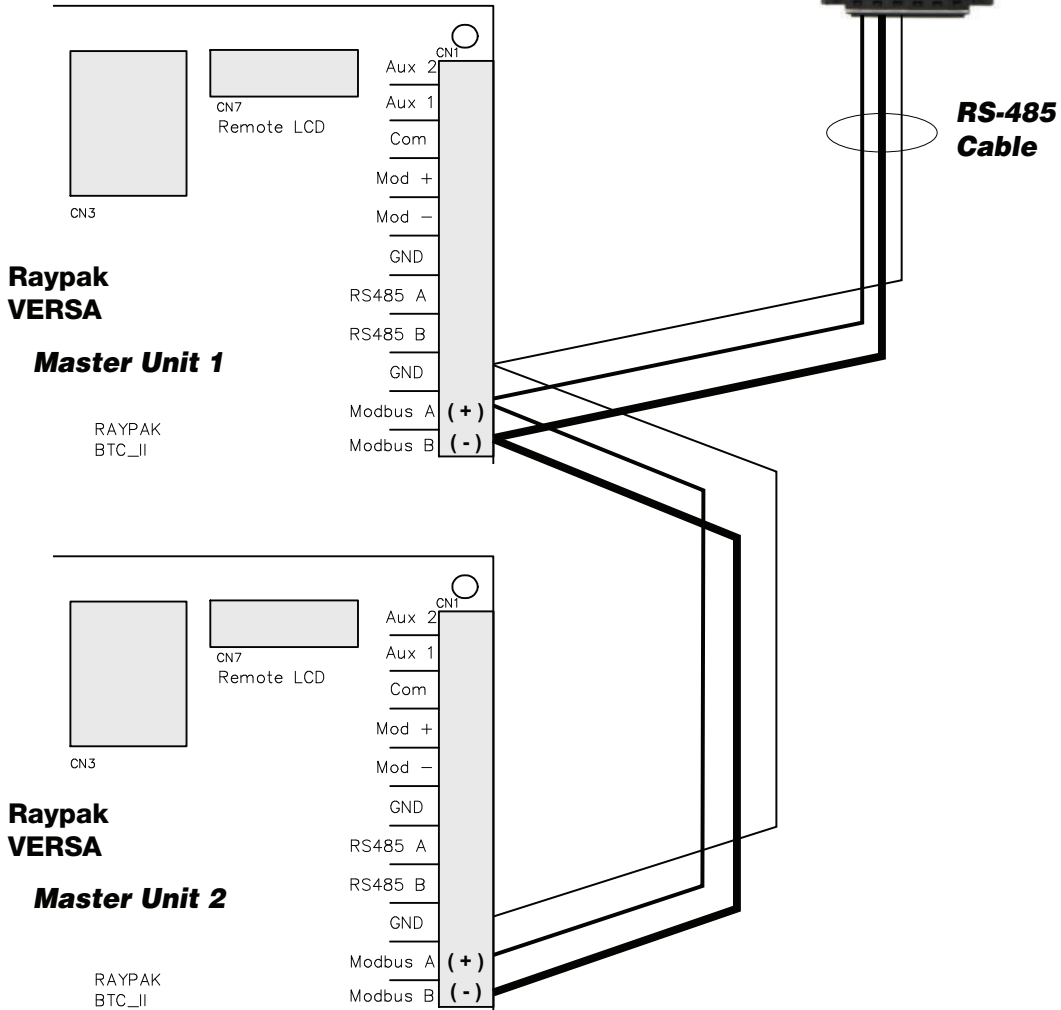

**Fig. 7: Multiple VERSA IC Masters**

## Wiring the ProtoNode RER to RS-485 Field Protocol (BACnet MS/TP or Metasys N2)

- Connect BMS BACnet MS/TP or Metasys N2 RS485 port to the 3-pin RS485 connector on ProtoNode RER as shown below.

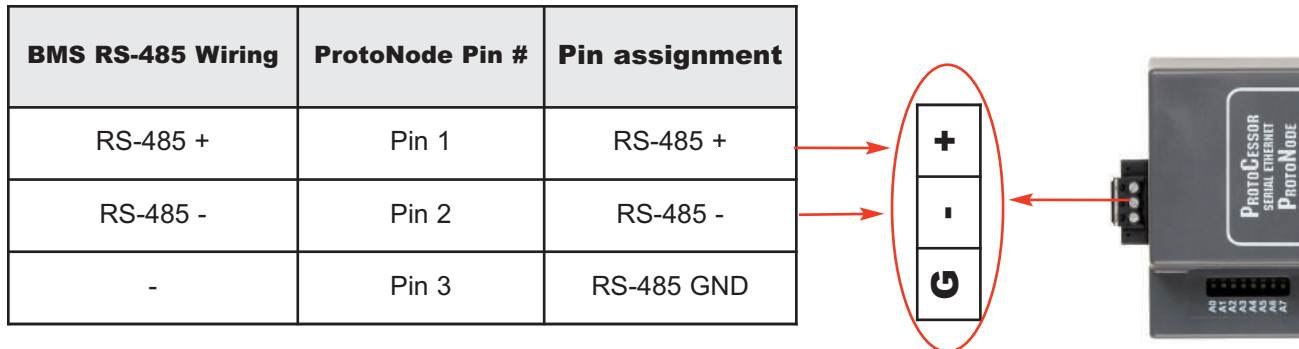


Fig. 8: Connection from ProtoNode to RS-485 Field Protocol –BACnet MS/TP

- Connect BMS BACnet MS/TP or Metasys N2 RS485 port to the 3-pin RS485 connector on ProtoNode RER as shown below.

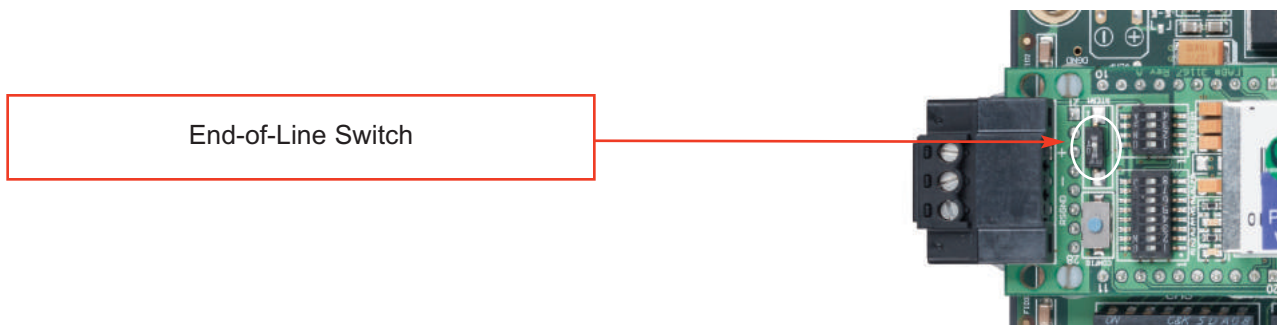


Fig. 9: End-of-line termination on from ProtoNode to RS-485 Field Protocol – BACnet MS/TP

## Wiring the ProtoNode LER (FPC-N35) Field Port to a LonWorks network

- Connect the ProtoNode to the field network with the LonWorks terminal using a twisted pair non-shielded cable. LonWorks has no polarity.

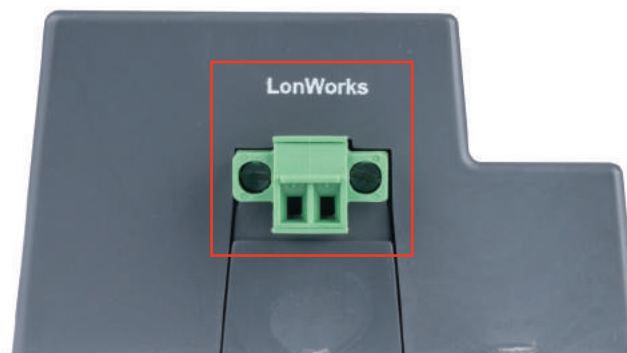


Fig. 10: LonWorks Terminal

## Power-Up the ProtoNode RER (FPC-N34 BACnet) or ProtoNode LER (FPC-N35 LonWorks)

- Apply power to the ProtoNode. Ensure that the power supply used complies with the specifications provided in Appendix C.1. Ensure that the cable is grounded using the “Frame-GND” terminal. The ProtoNode is factory set to accept both 9-30VDC and 12-24 VAC. Raypak recommends using a dedicated power supply for the Protonode in lieu of unit power.

### Voltage Pin outs

Power to the ProtoNode	ProtoNode Pin #	Pin Assignment
Power In (+)	Pin 4	V +
Power In (-)	Pin 5	V -
Frame Ground	Pin 6	FRAME GND

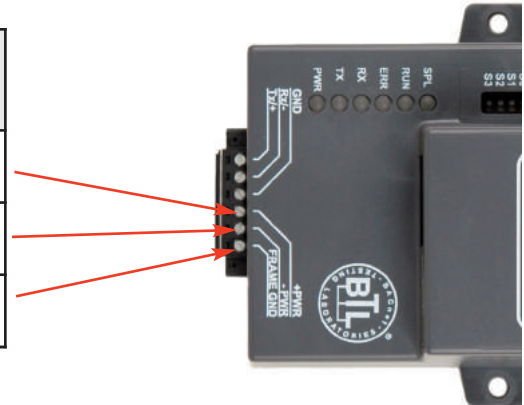


Fig. 11: Power pin outs to the ProtoNode




## CONNECT TO THE PROTONODE’S WEB CONFIGURATOR TO SETUP THE RAYPAK PRODUCTS (PROFILES) CONNECTED TO THE PROTONODE RER OR LER

### Connect the PC to the ProtoNode via the Ethernet port



Fig. 12: Ethernet port location of ProtoNode

- Connect a standard CAT5 Ethernet cable (Straight through or Cross-Over) between the PC and ProtoNode
- The Default IP Address of the ProtoNode is 192.168.1.24, Subnet Mask is 255.255.255.0. If the PC and the ProtoNode are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network

- go to  >  > 

- Right-click on Local Area Connection > Properties



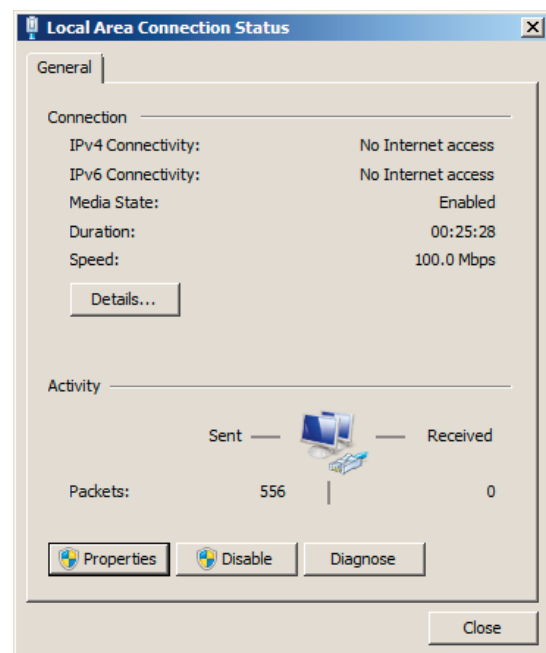


Fig. 13: Local Area Connection Properties

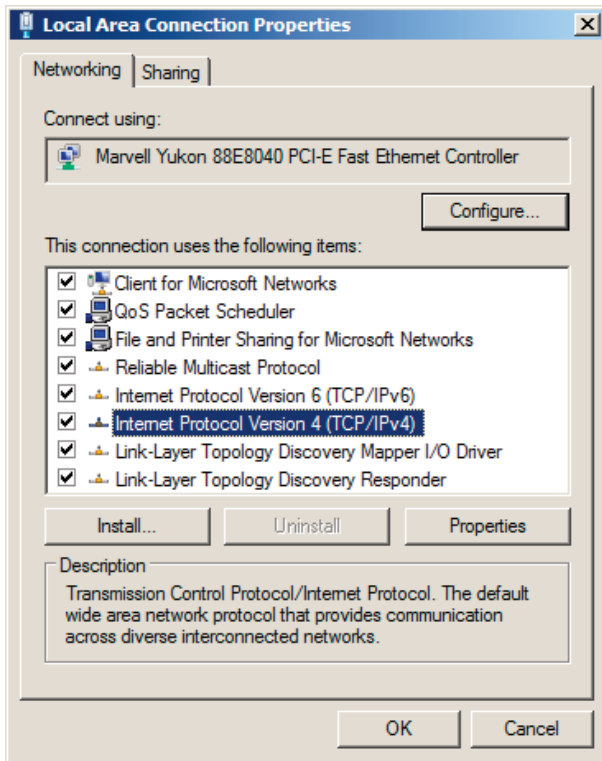

**Fig. 14: Internet Protocol Version 4**

- Highlight **Internet Protocol Version 4**
- Click **Properties**

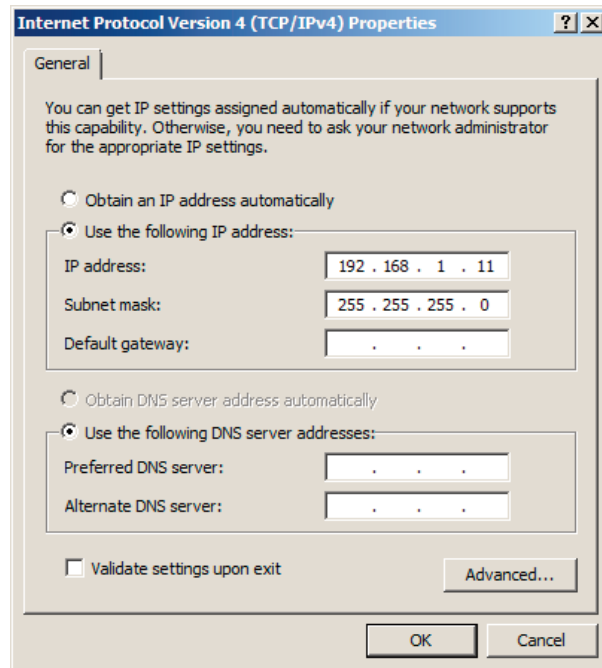

**Fig. 15: Internet Protocol Address**

- Enter IP Address: 192.168.1.11
- Verify Subnet Mask: 255.255.255.0
- Click **OK**
- Click **Close** twice

## Configure Profiles in the ProtoNode's Web Configurator

- Open PC web browser; enter the default IP address of the ProtoNode 192.168.1.24.
- When the S bank of DIP switches are set for BACnet you will see all the Raypak Profiles supporting BACnet listed in the Configurator.
- When the S bank is set for BACnet MS/TP, all Raypak profiles supporting BACnet MS/TP will appear.

## Selecting the Raypak profiles that will be connected the ProtoNode

- When you open the Web Configurator, you will see Active Profiles on the left side of the screen. There is a pull down box under Current Profiles that will list all the profiles available to select from.
- To add an active profile to the ProtoNode, select Add under Active Profiles. For every Raypak VERSA IC Master Unit that will be added to the ProtoNode, you will need to add the Active Profile (on the left of the screen) and the Modbus Node Address that the device is assigned to. Each Versa IC Master unit must have a unique Modbus Node Address selected in the Versa adjust menu. **Note: Modbus Node Address must match the Node ID selected when commissioning the Protonode from the Web Configurator shown below.**

**FieldServer Technologies**

### Configuration Parameters

Parameter Name	Parameter Description	Value	
network_nr	Set the BACnet network number of the Gateway. (1 - 65535)	50	Submit
node_offset	Set the BACnet device id. (node_offset+Modbus device id)	50000	Submit
bac_ip_port	Set the BACnet IP port. Default is 47808. (1 - 65535)	47808	Submit
bac_cov_option	Use COV_Enable to enable. Use COV_Disable to disable.	COV_Disable	Submit
bac_bbmd_option	Use BBMD to enable. Use - to disable. The bdt.ini files also needs to be downloaded.	-	Submit

### Active profiles

Nr	Node ID	Current profile	Parameters	
		BAC_IP_Versa_IC		Submit Cancel

HELP (?)   Discovery Mode   System Restart   Clear Profiles and Restart   Diagnostics & Debugging

Fig. 16: Web Configurator showing the active profiles to select from

- Once the Profile and Modbus Node Address have been selected, press the Add button to add the Profile to be configured.

bac_ip_port	Set the BACnet IP port. Default is 47808. (1 - 65535)	47808
bac_cov_option	Use COV_Enable to enable. Use COV_Disable to disable.	COV_Disable
bac_bbmd_option	Use BBMD to enable. Use - to disable. The bdt.ini files also needs to be downloaded.	-

**Active profiles**

Nr	Node ID	Current profile	Parameters
1		BAC_IP_Versa_IC	

Submit Ca

HELP (?)  Discovery Mode System Restart Clear Profiles and Restart

Fig. 17: Web Configurator showing a profile selected

bac_ip_port	Set the BACnet IP port. Default is 47808. (1 - 65535)	47808
bac_cov_option	Use COV_Enable to enable. Use COV_Disable to disable.	COV_Disable
bac_bbmd_option	Use BBMD to enable. Use - to disable. The bdt.ini files also needs to be downloaded.	-

**Active profiles**

Nr	Node ID	Current profile	Parameters
1	1	BAC_IP_Versa_IC	

Add Remove

HELP (?)  Discovery Mode System Restart Clear Profiles and Restart

Fig. 18: Web Configurator showing a completed profile added

- Continue this process until all the Raypak VERSA IC Master units have been added.



---

## Changing BN\_Node\_Offset via the ProtoNode's Web Configurator

- The BACnet Device Instance is equal to the Modbus Node ID plus the BN\_Node\_Offset.
- To change the BN\_Node\_offset, enter the new values for the offset in web configurator.
- And click  to update new values.

## Set IP Address for BACnet/IP via GUI

- Open a PC web browser, enter the default IP address of the ProtoNode 192.168.1.24 and connect to the Protonote.
- The Default GUI landing page is the Web Configuration.
- Press the Diagnostics and Debugging button at the bottom right corner of the page to go to FSGUI utility.



**Fig. 19: Web Configurator showing multiple completed profiles added**

- Click on setup and then Network Settings to enter the Edit IP Adress Settings menu.

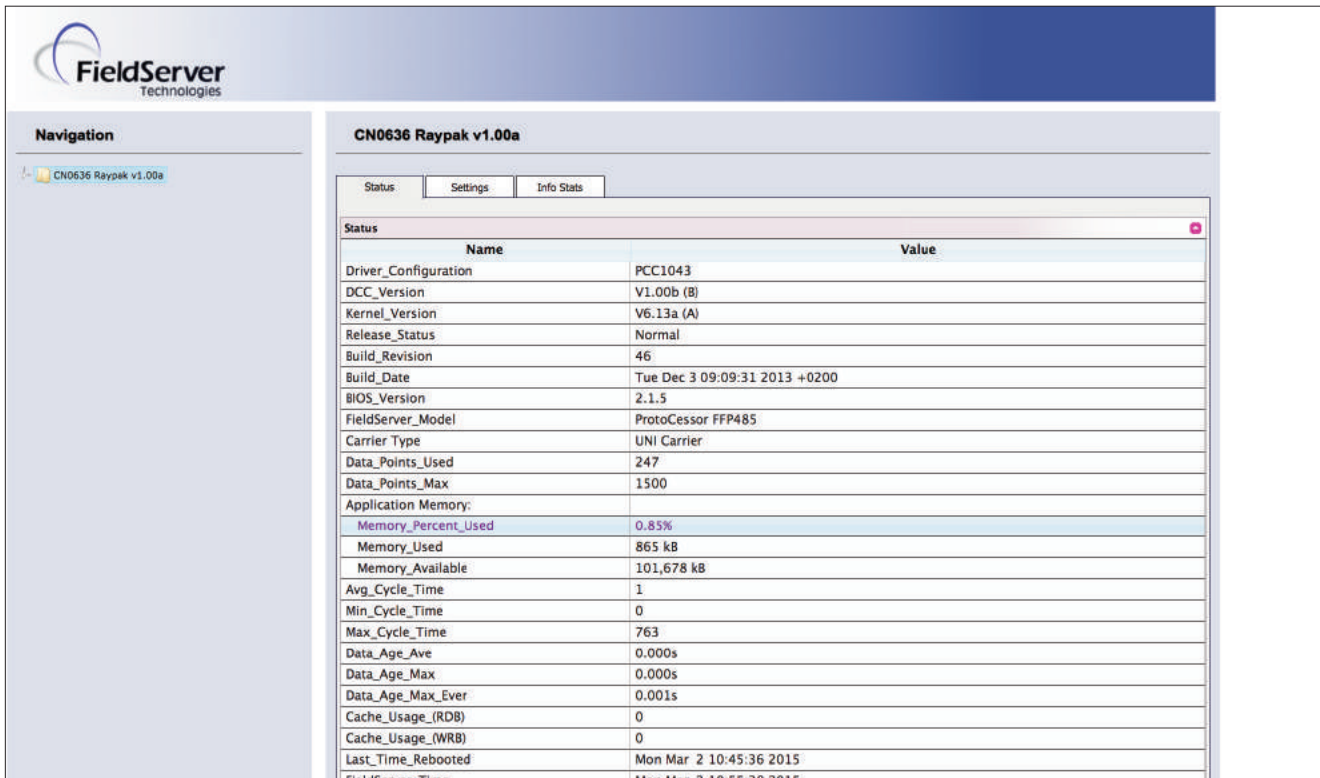


Fig. 20: Default FS Web GUI Landing Page

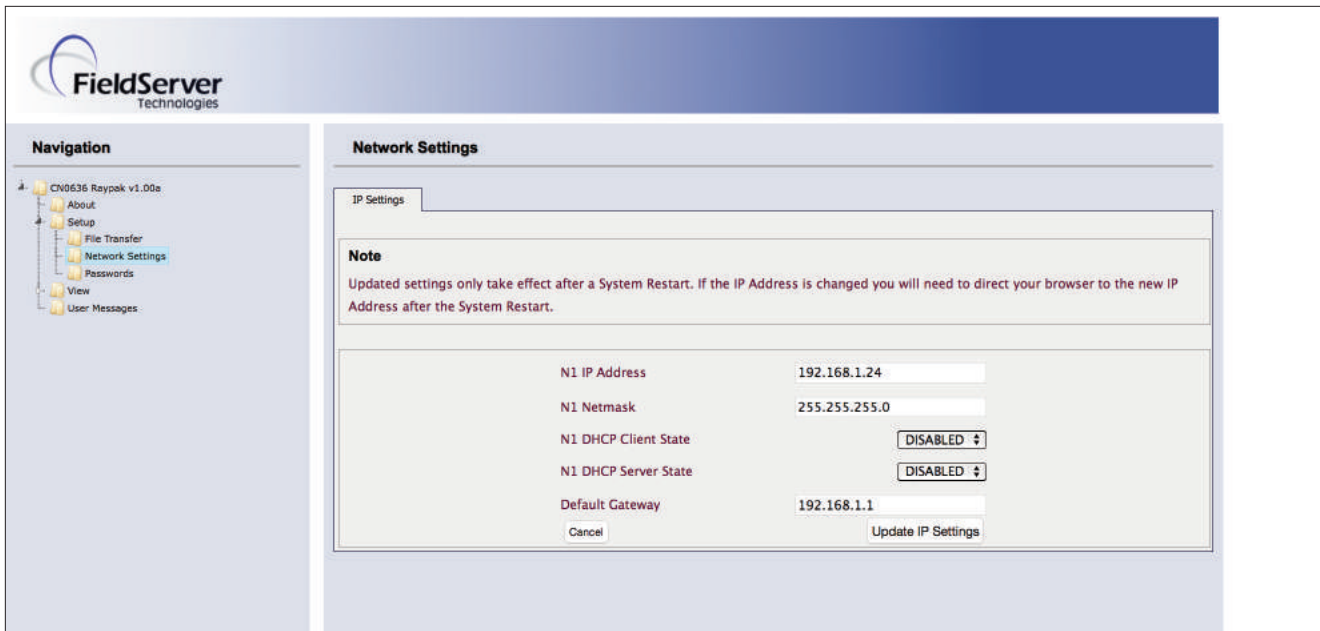


Fig. 21: ProtoNode Network Settings Tab

- Type in a new Subnet Mask
- If necessary, change the IP Gateway (Default Gateway field)
- Type in a new IP Gateway
- Note: If the ProtoNode is connected to a router, the IP Gateway of the ProtoNode should be set to the IP address of the router that it is connected to
- Reset ProtoNode
- Unplug Ethernet cable from PC and connect it to the network hub or router

# COMMISSIONING THE PROTONODE LER ON A LONWORKS NETWORK

Commissioning may only be performed by the LonWorks administrator.

## Commissioning the ProtoNode LER on a LonWorks network

To commission the ProtoNode LER LonWorks port, insert a small screwdriver in the commissioning hole on the face of the LER's enclosure to access the Service Pin. See the illustration on the ProtoNode LER as to which way to toggle the screw driver during commissioning.



Fig. 22: ProtoNode LER Commissioning Hole Location

- If an XIF file is required, see Fig. 27 to generate XIF

## Instructions to Upload XIF File From the ProtoNode LER Using FS GUI Web Server

- Connect a standard cat5 Ethernet cable between the PC and ProtoNode
- The Default IP Address of the ProtoNode is 192.168.1.24, Subnet Mask is 255.255.255.0. If the PC and the ProtoNode are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network

### For Windows XP:

- go to > >
- Right-click on Local Area Connection > Properties
- Highlight  Internet Protocol (TCP/IP) >

### For Windows 7:

- go to > >
- Right-click on Local Area Connection > Properties
- Highlight  Internet Protocol Version 4 >

- For Windows XP and Windows 7, select: Use the following IP address

- Click twice

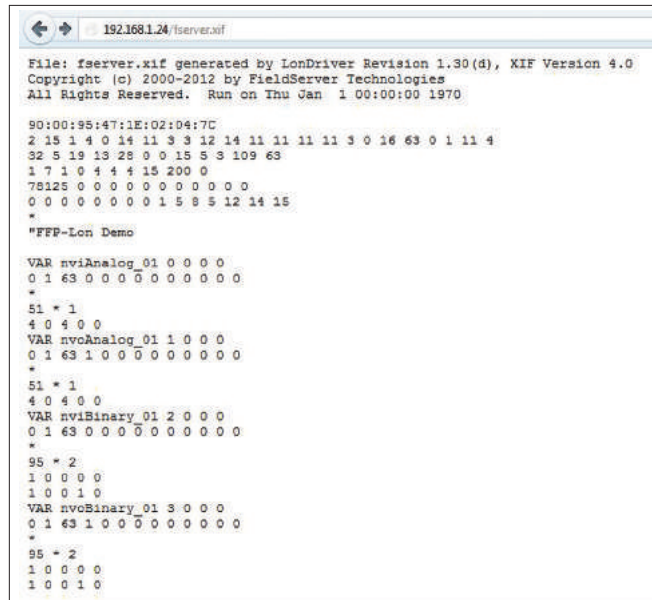


Fig. 23: Sample of Fserver.XIF file being generated

- Open a web browser and go to the following address: IP address of ProtoCessor/fserver.xif
- Example: 192.168.1.24/fserver.xif
- Download and save the file onto the PC.

# CHIPKIN AUTOMATION'S CAS BACNET EXPLORER FOR VALIDATING THE PROTONODE IN THE FIELD

Chipkin Automation has extended to Raypak and their customers a free complementary 2 week fully functional copy of CAS BACnet Explorer that can be used to validate BACnet MS/TP and/or BACnet/IP communications of the ProtoNode in the field without having to have the BMS Integrator on site. A Serial or USB to RS-485 converter is needed to test BACnet MS/TP.

## Downloading Chipkin Automation's CAS Explorer and Requesting an Activation Key

- To request a 2-week complementary BACnet CAS key, go to <http://app.chipkin.com/activation/twoweeek/> and fill in all the information. Enter Vendor Code "Raypak2012". Once completed, the key will be sent to the email address that was submitted. From this email from Chipkin Automation, the long key will need to be copied and pasted into the CAS key activation page.

### Request a two week account activation

You have two choices

- 1. Activate your account for two weeks**

To request a two week account activation, simply complete this form and request a new product key from within the CAS BACnet Explorer.  
Note: Your contact info will be used by chipkin to contact you. If your contact info is invalid or you are unreachable your account will be revoked.

Name:   
Company:   
Address:   
Phone number:   
Email Address:   
Vendor code:   
Product: CAS BACnet Explorer
- 2. Purchase**

You can buy the CAS BACnet Explorer to get a full account from If you have one, you can use your discount coupon on the web page. [Visit this page](#)

Feel free to [contact us](#) with any questions you may have.

- Go to Chipkin Automation's web site, download, and install the CAS BACnet Explorer to your PC <http://www.chipkin.com/technical-resources/cas-bacnet-explorer/>.
- In the CAS Activation form, enter the email address and paste the CAS key that was sent from Chipkin Automation. Once completed, select Activation.

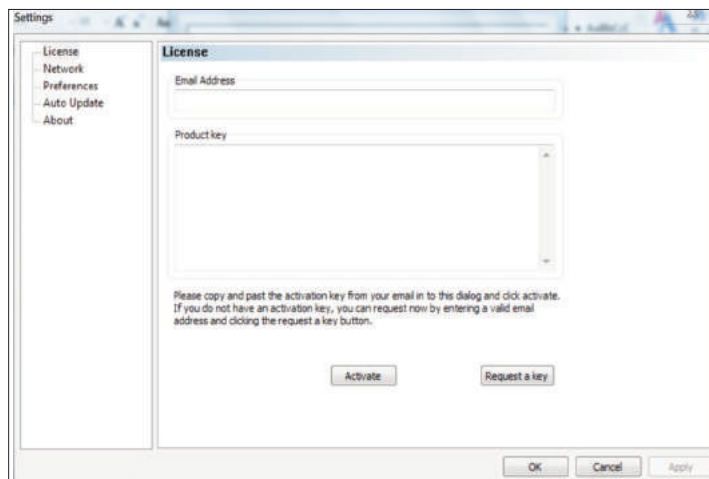


Fig. 24: Chipkin Account Activation

## CAS BACnet Setup

These are the instructions to set CAS Explorer up for the first time on BACnet MS/ST and BACnet/IP.

### CAS BACnet MS/TP Setup

- Using the Serial or USB to RS-485 converter, connect it to your PC and the 3 Pin BACnet MS/TP connector on the ProtoNode RER.
- In CAS Explorer, do the following:
  - Click on settings
  - Check the BACnet MSTP box and uncheck the BACnet IP and BACnet Ethernet boxes.
  - Set the BACnet MSTP MAC address to 0.
  - Set the BACnet MSTP Baud Rate to 38400.
  - Click Ok.
  - On the bottom right-hand corner, make sure that the BACnet MSTP box is green.
  - Click on discover.
  - Check all 4 boxes.
  - Click Send.

### CAS BACnet BACnet/IP Setup

- See Section 5.1 to set the IP address and subnet of the PC that will be running the CAS Explorer.
- Connect a straight through or cross Ethernet cable from the PC to the ProtoNode.
- In CAS Explorer, do the following:
  - Click on settings
  - Check the BACnet IP box and uncheck the BACnet MSTP and BACnet Ethernet boxes.
  - In the “Select a Network Device” box, select the network card of the PC by clicking on it.
  - Click Ok.
  - On the bottom right-hand corner, make sure that the BACnet IP box is green.
  - Click on discover.
  - Check all 4 boxes.
  - Click Send.

## Appendix A. Troubleshooting

### Appendix A.1. check Wiring and Settings

- No COMS on Modbus RTU side. If Tx/Rx are not flashing rapidly then there is a COM issue on the Modbus side and you need to check the following things:
  - Visual observations of LEDs on ProtoNode. See Appendix A.5
  - Check baud rate, parity, data bits, stop bits
  - Check Modbus device address
  - Verify wiring

- Field COM problems.
  - Visual observations of LEDs on ProtoNode. See Appendix A.5
  - Visual dipswitch settings (using correct baud rate and device instance)
  - Verify IP address setting
  - Verify wiring

If the problem still exists, a Diagnostic Capture needs to be taken and sent to FieldServer. See Appendix A.2

### Appendix A.2. Take Diagnostic Capture With the FieldServer Utilities

- Once the Diagnostic Capture is complete, email it to support@protocessor.com. The Diagnostic Capture will allow us to rapidly diagnose the problem.
- Make sure the FieldServer utilities are loaded on the PC.  
<http://fieldserver.com/techsupport/utility/utility.php>
- Disable any wireless Ethernet adapters on the PC/Laptop
- Disable firewall and virus protection software if possible
- Connect a standard cat5 Ethernet cable between the PC and the ProtoNode

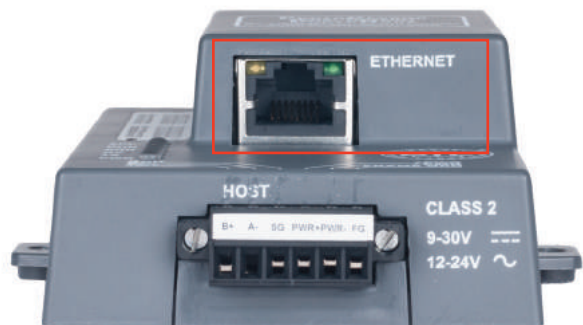








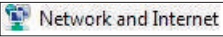


Fig. 25: ProtoNode Ethernet Port Location


- The Default IP Address of the ProtoNode is 192.168.1.24, Subnet Mask is 255.255.255.0. If the PC and the ProtoNode are on different IP Networks, assign a static IP Address to the PC on the 192.168.1.xxx network

#### For Windows XP:

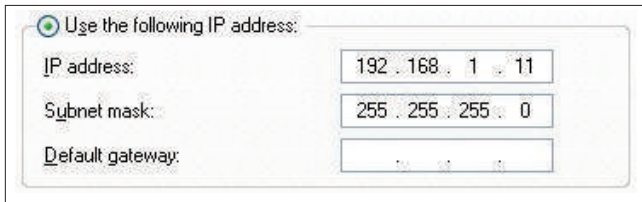- go to  >  > 
- Right-click on Local Area Connection > Properties
- Highlight  Internet Protocol (TCP/IP) > 

## For Windows 7:

- go to  >  Control Panel >  Network and Internet
- Right-click on Local Area Connection > Properties
- Highlight   Internet Protocol Version 4 >  Properties
- For Windows XP and Windows 7, select: Use the following IP address






Use the following IP address:

IP address: 192 . 168 . 1 . 11


Subnet mask: 255 . 255 . 255 . 0

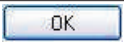
Default gateway:

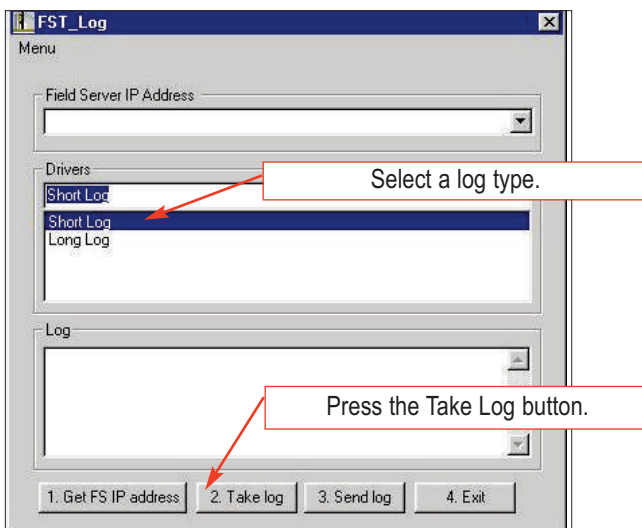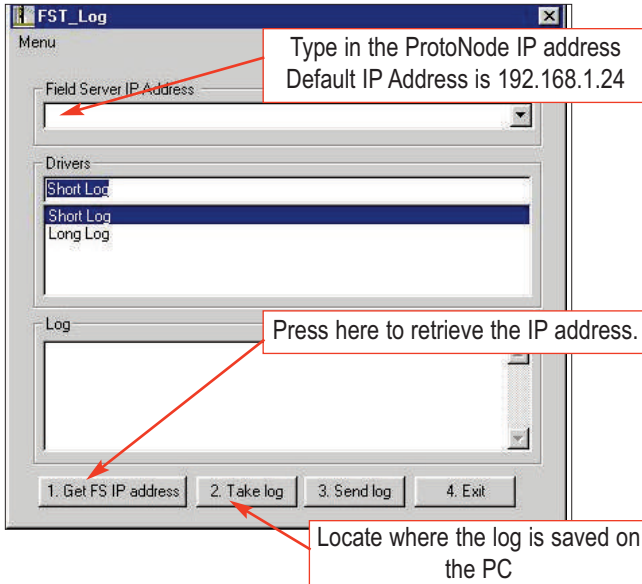- Click  twice
- Double click on the FST Diag Utility.
- Step 1: Select a Field Server IP Address.



- The IP address can be entered manually or selected by clicking on button 1 using the Utility.
- Step 2: Take a Log
- Press the Take Log button. While the Utility runs a few DOS prompts will flash across the monitor. Don't click or type anything in to these DOS prompts. This step may take a few minutes depending on the chosen Log Type and computer speed. When the Utility is finished you will be presented with a log of events that have occurred.
- Step 3: Send Log
- Click the "Send Log" button located near the bottom of the dialog. The following dialog should appear.

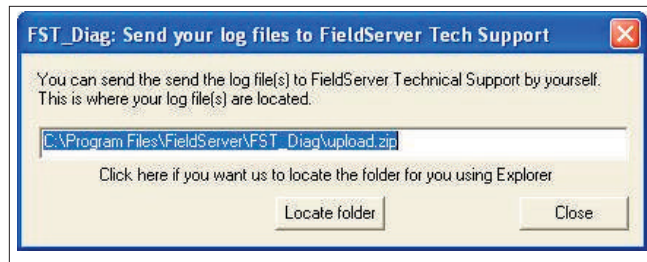

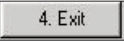- Push the 'Locate Folder' button to launch explorer and have it point directly at the correct folder. The file upload.zip must be sent to support@fieldserver.com.
- Step 4: Close the Program
- Press the  button when the log is completed

## Appendix A.3. Setting the Network Number for BACnet IP

On the main Web-Configurator screen, update the Network Number in the BN\_Network\_Nr and hit Submit. Please note that the default value is 5.

The screenshot shows the FieldServer Technologies Web-Configurator interface. The 'Configuration Parameters' section contains the following parameters:

Parameter Name	Parameter Description	Value
network_nr	Set the BACnet network number of the Gateway. (1 - 65535)	50
node_offset	Set the BACnet device id. (node_offset+Modbus device id)	50001
bac_ip_port	Set the BACnet IP port. Default is 47808. (1 - 65535)	47808
bac_cov_option	Use COV_Enable to enable. Use COV_Disable to disable.	COV_Disable
bac_bcmd_option	Use BBMD to enable. Use - to disable. The bdt.ini files also needs to be downloaded.	-

The 'Active profiles' section shows a dropdown menu with 'BAC\_IP\_Versa\_IC' selected. Below the configuration area, there are buttons for 'HELP (?)', 'Discovery Mode', 'System Restart', 'Clear Profiles and Restart', 'Download device info', and 'Diagnostics & Debugging'.

Fig. 26: Setting the Network Number for BACnet IP

## Appendix A.4. LED Diagnostics for Modbus RTU Communications between the ProtoNode and Raypak VERSA IC

Please see the diagram below for LED Locations

### ProtoNode RER and LER LEDs

Light	Description For ProtoNode RER and LER
RTC	Unused
RUN	The RUN LED will start flashing 20 seconds after power indicating normal operation.
ERR	The SYS ERR LED will go on solid 15 seconds after power up. It will turn off after 5 seconds. A steady red light will indicate there is a system error on the ProtoNode. If this occurs, immediately report the related "system error" shown in the error screen of the GUI interface to FieldServer Technologies for evaluation.
RX	The RX LED will flash when a message is received on the Modbus RTU.
TX	The TX LED will flash when a message is sent on the Modbus RTU.
PWR	This is the power light and should show steady green at all times when the ProtoNode is powered.

Fig. 27: Diagnostic LEDs Location and Description

## Appendix B. Vendor Information

### Appendix B. Raypak VERSA IC Modbus RTU Mappings to BACnet MS/TP, BACnet/IP, Metasys N2 and LonWorks

Point Name	BACnet Object Type	BACnet Object ID	N2 Data Type	N2 Point Address	Lon Name	Lon SNVT
MODBUS	AI	1	AI	1	nvoMODBUS_XXX	SNVT_count_f
System Supply Temperature	AI	2	AI	2	nvoSysSupTmp_XXX	SNVT_temp_p
Outdoor Temperature	AI	3	AI	3	nvoOutdrTmp_XXX	SNVT_temp_p
DHW Temperature	AI	4	AI	4	nvoDHWTmp_XXX	SNVT_temp_p
Aux 1 Temperature	AI	5	AI	5	nvoAux1Tmp_XXX	SNVT_temp_p
Aux 2 Temperature	AI	6	AI	6	nvoAux2Tmp_XXX	SNVT_temp_p
System Pump	AI	7	AI	7	nvoSysPmp_XXX	SNVT_count_f
System Pump Runtime	AI	8	AI	8	nvoSysPmpRtm_XXX	SNVT_count_f
DHW Pump	AI	9	AI	9	nvoDHWPmp_XXX	SNVT_count_f
DHW Pump Runtime	AI	10	AI	10	nvoDHWPmpRtm_XXX	SNVT_count_f
Setback	AI	11	AI	11	nvoSetback_XXX	SNVT_count_f
CH Call	AI	12	AI	12	nvoCHCall_XXX	SNVT_count_f
DHW Call	AI	13	AI	13	nvoDHWCall_XXX	SNVT_count_f
Target temperature	AI	14	AI	14	nvoTargetTmp_XXX	SNVT_temp_p
Target rate	AI	15	AI	15	nvoTargetRat_XXX	SNVT_lev_percent
Auto Diff	BI	16	DI	16	nvoMonAutoDf_XXX	SNVT_switch
Lead Blr detected	BI	17	DI	17	nvoLdDetct_XXX	SNVT_switch
Lead Blr Outlet temperature	AI	18	AI	18	nvoLdOutTmp_XXX	SNVT_temp_p
Lead Blr Inlet temperature	AI	19	AI	19	nvoLdInTmp_XXX	SNVT_temp_p
Lead Blr Vent temperature	AI	20	AI	20	nvoLdVntTmp_XXX	SNVT_temp_p
Lead Blr High Limit temperature	AI	21	AI	21	nvoLdHiLmTp_XXX	SNVT_temp_p
Lead Blr Operator temperature	AI	22	AI	22	nvoLdOpTmp_XXX	SNVT_temp_p
Lead Blr Mod Rate	AI	23	AI	23	nvoLdModRat_XXX	SNVT_lev_percent
Lead Blr Mix Rate	AI	24	AI	24	nvoLdMixRat_XXX	SNVT_lev_percent
Lead Blr Ignition Status	AI	25	AI	25	nvoLdIlgStat_XXX	SNVT_count_f
Lead Blr Runtime	AI	26	AI	26	nvoLdRtim_XXX	SNVT_count_f
Lead Blr Cycles	AI	27	AI	27	nvoLdCyc_XXX	SNVT_count_f
Lead Blr Pump	AI	28	AI	28	nvoLdPmp_XXX	SNVT_count_f
Lead Blr Pump Runtime	AI	29	AI	29	nvoLdPmpRtm_XXX	SNVT_count_f
Lead Blr Error Code	AI	30	AI	30	nvoLdErrCod_XXX	SNVT_count_f
Lead Blr Error History 1	AI	31	AI	31	nvoLdErHt1_XXX	SNVT_count_f
Lead Blr Error History 2	AI	32	AI	32	nvoLdErHt2_XXX	SNVT_count_f
Lead Blr Error History 3	AI	33	AI	33	nvoLdErHt3_XXX	SNVT_count_f
Lead Blr Error History 4	AI	34	AI	34	nvoLdErHt4_XXX	SNVT_count_f



Point Name	BACnet Object Type	BACnet Object ID	N2 Data Type	N2 Point Address	Lon Name	Lon SNVT
Lead Blr Error History 5	AI	35	AI	35	nvoLdErHt5_XXX	SNVT_count_f
Lead Blr Error History 6	AI	36	AI	36	nvoLdErHt6_XXX	SNVT_count_f
Lead Blr Error History 7	AI	37	AI	37	nvoLdErHt7_XXX	SNVT_count_f
Lead Blr Error History 8	AI	38	AI	38	nvoLdErHt8_XXX	SNVT_count_f
Lead Blr Error History 9	AI	39	AI	39	nvoLdErHt9_XXX	SNVT_count_f
Lead Blr Error History 10	AI	40	AI	40	nvoLdErHt10_XXX	SNVT_count_f
Lead Blr Error History 11	AI	41	AI	41	nvoLdErHt11_XXX	SNVT_count_f
Lead Blr Error History 12	AI	42	AI	42	nvoLdErHt12_XXX	SNVT_count_f
Lead Blr Error History 13	AI	43	AI	43	nvoLdErHt13_XXX	SNVT_count_f
Lead Blr Error History 14	AI	44	AI	44	nvoLdErHt14_XXX	SNVT_count_f
Lead Blr Error History 15	AI	45	AI	45	nvoLdErHt15_XXX	SNVT_count_f
Follower1 detected	BI	46	DI	46	nvoFI1Detct_XXX	SNVT_switch
Follower1 Outlet temperature	AI	47	AI	47	nvoFI1OutTmp_XXX	SNVT_temp_p
Follower1 Inlet temperature	AI	48	AI	48	nvoFI1InTmp_XXX	SNVT_temp_p
Follower1 Vent temperature	AI	49	AI	49	nvoFI1VntTmp_XXX	SNVT_temp_p
Follower1 High Limit temperature	AI	50	AI	50	nvoFI1HiLmTp_XXX	SNVT_temp_p
Follower1 Operator temperature	AI	51	AI	51	nvoFI1OpTmp_XXX	SNVT_temp_p
Follower1 Mod Rate	AI	52	AI	52	nvoFI1ModRat_XXX	SNVT_lev_percent
Follower1 Mix Rate	AI	53	AI	53	nvoFI1MixRat_XXX	SNVT_lev_percent
Follower1 Ignition Status	AI	54	AI	54	nvoFI1IgStat_XXX	SNVT_count_f
Follower1 Runtime	AI	55	AI	55	nvoFI1Rtm_XXX	SNVT_count_f
Follower1 Cycles	AI	56	AI	56	nvoFI1Cyc_XXX	SNVT_count_f
Follower1 Pump	AI	57	AI	57	nvoFI1Pmp_XXX	SNVT_count_f
Follower1 Pump Runtime	AI	58	AI	58	nvoFI1PmpRtm_XXX	SNVT_count_f
Follower1 Error Code	AI	59	AI	59	nvoFI1ErrCod_XXX	SNVT_count_f
Follower1 Error History 1	AI	60	AI	60	nvoFI1ErHt1_XXX	SNVT_count_f
Follower1 Error History 2	AI	61	AI	61	nvoFI1ErHt2_XXX	SNVT_count_f
Follower1 Error History 3	AI	62	AI	62	nvoFI1ErHt3_XXX	SNVT_count_f
Follower1 Error History 4	AI	63	AI	63	nvoFI1ErHt4_XXX	SNVT_count_f
Follower1 Error History 5	AI	64	AI	64	nvoFI1ErHt5_XXX	SNVT_count_f
Follower1 Error History 6	AI	65	AI	65	nvoFI1ErHt6_XXX	SNVT_count_f
Follower1 Error History 7	AI	66	AI	66	nvoFI1ErHt7_XXX	SNVT_count_f
Follower1 Error History 8	AI	67	AI	67	nvoFI1ErHt8_XXX	SNVT_count_f
Follower1 Error History 9	AI	68	AI	68	nvoFI1ErHt9_XXX	SNVT_count_f

Point Name	BACnet Object Type	BACnet Object ID	N2 Data Type	N2 Point Address	Lon Name	Lon SNVT
Follower1 Error History 10	AI	69	AI	69	nvoFI1ErHt10_XXX	SNVT_count_f
Follower1 Error History 11	AI	70	AI	70	nvoFI1ErHt11_XXX	SNVT_count_f
Follower1 Error History 12	AI	71	AI	71	nvoFI1ErHt12_XXX	SNVT_count_f
Follower1 Error History 13	AI	72	AI	72	nvoFI1ErHt13_XXX	SNVT_count_f
Follower1 Error History 14	AI	73	AI	73	nvoFI1ErHt14_XXX	SNVT_count_f
Follower1 Error History 15	AI	74	AI	74	nvoFI1ErHt15_XXX	SNVT_count_f
Follower2 detected	BI	75	DI	75	nvoFI2Detct_XXX	SNVT_switch
Follower2 Outlet temperature	AI	76	AI	76	nvoFI2OutTmp_XXX	SNVT_temp_p
Follower2 Inlet temperature	AI	77	AI	77	nvoFI2InTmp_XXX	SNVT_temp_p
Follower2 Vent temperature	AI	78	AI	78	nvoFI2VntTmp_XXX	SNVT_temp_p
Follower2 High Limit temperature	AI	79	AI	79	nvoFI2HiLmTp_XXX	SNVT_temp_p
Follower2 Operator temperature	AI	80	AI	80	nvoFI2OpTmp_XXX	SNVT_temp_p
Follower2 Mod Rate	AI	81	AI	81	nvoFI2ModRat_XXX	SNVT_lev_percent
Follower2 Mix Rate	AI	82	AI	82	nvoFI2MixRat_XXX	SNVT_lev_percent
Follower2 Ignition Status	AI	83	AI	83	nvoFI2IgStat_XXX	SNVT_count_f
Follower2 Runtime	AI	84	AI	84	nvoFI2Rtm_XXX	SNVT_count_f
Follower2 Cycles	AI	85	AI	85	nvoFI2Cyc_XXX	SNVT_count_f
Follower2 Pump	AI	86	AI	86	nvoFI2Pmp_XXX	SNVT_count_f
Follower2 Pump Runtime	AI	87	AI	87	nvoFI2PmpRtm_XXX	SNVT_count_f
Follower2 Error Code	AI	88	AI	88	nvoFI2ErrCod_XXX	SNVT_count_f
Follower2 Error History 1	AI	89	AI	89	nvoFI2ErHt1_XXX	SNVT_count_f
Follower2 Error History 2	AI	90	AI	90	nvoFI2ErHt2_XXX	SNVT_count_f
Follower2 Error History 3	AI	91	AI	91	nvoFI2ErHt3_XXX	SNVT_count_f
Follower2 Error History 4	AI	92	AI	92	nvoFI2ErHt4_XXX	SNVT_count_f
Follower2 Error History 5	AI	93	AI	93	nvoFI2ErHt5_XXX	SNVT_count_f
Follower2 Error History 6	AI	94	AI	94	nvoFI2ErHt6_XXX	SNVT_count_f
Follower2 Error History 7	AI	95	AI	95	nvoFI2ErHt7_XXX	SNVT_count_f
Follower2 Error History 8	AI	96	AI	96	nvoFI2ErHt8_XXX	SNVT_count_f
Follower2 Error History 9	AI	97	AI	97	nvoFI2ErHt9_XXX	SNVT_count_f
Follower2 Error History 10	AI	98	AI	98	nvoFI2ErHt10_XXX	SNVT_count_f
Follower2 Error History 11	AI	99	AI	99	nvoFI2ErHt11_XXX	SNVT_count_f
Follower2 Error History 12	AI	100	AI	100	nvoFI2ErHt12_XXX	SNVT_count_f
Follower2 Error History 13	AI	101	AI	101	nvoFI2ErHt13_XXX	SNVT_count_f
Follower2 Error History 14	AI	102	AI	102	nvoFI2ErHt14_XXX	SNVT_count_f

Point Name	BACnet Object Type	BACnet Object ID	N2 Data Type	N2 Point Address	Lon Name	Lon SNVT
Follower2 Error History 15	AI	103	AI	103	nvoFI2ErHt15_XXX	SNVT_count_f
Follower3 detected	BI	104	DI	104	nvoFI3Detct_XXX	SNVT_switch
Follower3 Outlet temperature	AI	105	AI	105	nvoFI3OutTmp_XXX	SNVT_temp_p
Follower3 Inlet temperature	AI	106	AI	106	nvoFI3InTmp_XXX	SNVT_temp_p
Follower3 Vent temperature	AI	107	AI	107	nvoFI3VntTmp_XXX	SNVT_temp_p
Follower3 High Limit temperature	AI	108	AI	108	nvoFI3HiLmTp_XXX	SNVT_temp_p
Follower3 Operator temperature	AI	109	AI	109	nvoFI3OpTmp_XXX	SNVT_temp_p
Follower3 Mod Rate	AI	110	AI	110	nvoFI3ModRat_XXX	SNVT_lev_percent
Follower3 Mix Rate	AI	111	AI	111	nvoFI3MixRat_XXX	SNVT_lev_percent
Follower3 Ignition Status	AI	112	AI	112	nvoFI3IgStat_XXX	SNVT_count_f
Follower3 Runtime	AI	113	AI	113	nvoFI3Rtm_XXX	SNVT_count_f
Follower3 Cycles	AI	114	AI	114	nvoFI3Cyc_XXX	SNVT_count_f
Follower3 Pump	AI	115	AI	115	nvoFI3Pmp_XXX	SNVT_count_f
Follower3 Pump Runtime	AI	116	AI	116	nvoFI3PmpRtm_XXX	SNVT_count_f
Follower3 Error Code	AI	117	AI	117	nvoFI3ErrCod_XXX	SNVT_count_f
Follower3 Error History 1	AI	118	AI	118	nvoFI3ErHt1_XXX	SNVT_count_f
Follower3 Error History 2	AI	119	AI	119	nvoFI3ErHt2_XXX	SNVT_count_f
Follower3 Error History 3	AI	120	AI	120	nvoFI3ErHt3_XXX	SNVT_count_f
Follower3 Error History 4	AI	121	AI	121	nvoFI3ErHt4_XXX	SNVT_count_f
Follower3 Error History 5	AI	122	AI	122	nvoFI3ErHt5_XXX	SNVT_count_f
Follower3 Error History 6	AI	123	AI	123	nvoFI3ErHt6_XXX	SNVT_count_f
Follower3 Error History 7	AI	124	AI	124	nvoFI3ErHt7_XXX	SNVT_count_f
Follower3 Error History 8	AI	125	AI	125	nvoFI3ErHt8_XXX	SNVT_count_f
Follower3 Error History 9	AI	126	AI	126	nvoFI3ErHt9_XXX	SNVT_count_f
Follower3 Error History 10	AI	127	AI	127	nvoFI3ErHt10_XXX	SNVT_count_f
Follower3 Error History 11	AI	128	AI	128	nvoFI3ErHt11_XXX	SNVT_count_f
Follower3 Error History 12	AI	129	AI	129	nvoFI3ErHt12_XXX	SNVT_count_f
Follower3 Error History 13	AI	130	AI	130	nvoFI3ErHt13_XXX	SNVT_count_f
Follower3 Error History 14	AI	131	AI	131	nvoFI3ErHt14_XXX	SNVT_count_f
Follower3 Error History 15	AI	132	AI	132	nvoFI3ErHt15_XXX	SNVT_count_f
Auto Diff	BI	133	DI	133	nvoTmpAutoDf_XXX	SNVT_switch
Target Mode	BV	134	DO	134	nviTargetMod_XXX	SNVT_switch
Setpoint Target	AV	135	AO	135	nviSPTarget_XXX	SNVT_temp_p
Outdoor Start	AV	136	AO	136	nviOutdrStrt_XXX	SNVT_temp_p

Point Name	BACnet Object Type	BACnet Object ID	N2 Data Type	N2 Point Address	Lon Name	Lon SNVT
Outdoor Design	AV	137	AO	137	nviOutdrDsgn_XXX	SNVT_temp_p
Boil Start	AV	138	AO	138	nviBoilStrt_XXX	SNVT_temp_p
Boil Design	AV	139	AO	139	nviBoilDsgn_XXX	SNVT_temp_p
Manual Differential	AV	140	AO	140	nviMonManDif_XXX	SNVT_temp_p
DHW Exchange	AV	141	AO	141	nviDHWExch_XXX	SNVT_temp_p
DHW Tank	AV	142	AO	142	nviDHWTank_XXX	SNVT_temp_p
DHW Differential	AV	143	AO	143	nviDHWDiff_XXX	SNVT_temp_p
DHW Priority	BV	144	DO	144	nviDHWPrIo_XXX	SNVT_switch
DHW During UnOcc	BV	145	DO	145	nviDHWUnOc_XXX	SNVT_switch
WWSD During Occ	AV	146	AO	146	nviWWSDOcc_XXX	SNVT_temp_p
WWSD During UnOcc	AV	147	AO	147	nviWWSDUnOc_XXX	SNVT_temp_p
Tank Setpoint	AV	148	AO	148	nviTnkSP_XXX	SNVT_temp_p
Tank Differential	AV	149	AO	149	nviTnkDiff_XXX	SNVT_temp_p
Tank During UnOcc	BV	150	DO	150	nviTkDurUnOc_XXX	SNVT_switch
Pool Setpoint	AV	151	AO	151	nviPoolSP_XXX	SNVT_temp_p
Pool Differential	AV	152	AO	152	nviPoolIDiff_XXX	SNVT_temp_p
Pool Supply Max	AV	153	AO	153	nviPoolSupMx_XXX	SNVT_temp_p
Pool During UnOcc	BV	154	DO	154	nviPoolUnOcc_XXX	SNVT_switch
System Pump	AV	155	AO	155	nviSysPmp_XXX	SNVT_count_f
DHW Pump	AV	156	AO	156	nviDHWPmp_XXX	SNVT_count_f
Boiler Pump	AV	157	AO	157	nviBlrPmp_XXX	SNVT_count_f
Target temperature	AV	158	AO	158	nviTargetTmp_XXX	SNVT_temp_p
Manual Differential	AV	159	AO	159	nviTmpManDif_XXX	SNVT_temp_p
Target Mod Rate	AV	160	AO	160	nviTrgModRat_XXX	SNVT_lev_percent
Target Mix Rate	AV	161	AO	161	nviTrgMixRat_XXX	SNVT_lev_percent
Lead Blr On/Off	BV	162	DO	162	nviLdOnOff_XXX	SNVT_switch
Follower1 On/Off	BV	163	DO	163	nviFI1OnOff_XXX	SNVT_switch
Follower2 On/Off	BV	164	DO	164	nviFI2OnOff_XXX	SNVT_switch
Follower3 On/Off	BV	165	DO	165	nviFI3OnOff_XXX	SNVT_switch

## Appendix B.2. Address DIP Switch Settings

A7	A6	A5	A4	A3	A2	A1	A0	Address
Off	Off	Off	Off	Off	Off	Off	Off	0
Off	Off	Off	Off	Off	Off	Off	On	1
Off	Off	Off	Off	Off	Off	On	Off	2
Off	Off	Off	Off	Off	Off	On	On	3
Off	Off	Off	Off	Off	On	Off	Off	4
Off	Off	Off	Off	Off	On	Off	On	5
Off	Off	Off	Off	Off	On	On	Off	6
Off	Off	Off	Off	Off	On	On	On	7
Off	Off	Off	Off	On	Off	Off	Off	8
Off	Off	Off	Off	On	Off	Off	On	9
Off	Off	Off	Off	On	Off	On	Off	10
Off	Off	Off	Off	On	Off	On	On	11
Off	Off	Off	Off	On	On	Off	Off	12
Off	Off	Off	Off	On	On	Off	On	13
Off	Off	Off	Off	On	On	On	Off	14
Off	Off	Off	Off	On	On	On	On	15
Off	Off	Off	On	Off	Off	Off	Off	16
Off	Off	Off	On	Off	Off	Off	On	17
Off	Off	Off	On	Off	Off	On	Off	18
Off	Off	Off	On	Off	Off	On	On	19
Off	Off	Off	On	Off	On	Off	Off	20
Off	Off	Off	On	Off	On	Off	On	21
Off	Off	Off	On	Off	On	On	Off	22
Off	Off	Off	On	Off	On	On	On	23
Off	Off	Off	On	On	Off	Off	Off	24
Off	Off	Off	On	On	Off	Off	On	25
Off	Off	Off	On	On	Off	On	Off	26
Off	Off	Off	On	On	Off	On	On	27
Off	Off	Off	On	On	On	Off	Off	28
Off	Off	Off	On	On	On	On	Off	29
Off	Off	Off	On	On	On	On	On	30
Off	Off	Off	On	On	On	On	On	31
Off	Off	On	Off	Off	Off	Off	Off	32
Off	Off	On	Off	Off	Off	Off	On	33
Off	Off	On	Off	Off	Off	On	Off	34
Off	Off	On	Off	Off	Off	On	On	35
Off	Off	On	Off	Off	On	Off	Off	36
Off	Off	On	Off	Off	On	Off	On	37
Off	Off	On	Off	Off	On	On	Off	38

A7	A6	A5	A4	A3	A2	A1	A0	Address
Off	Off	On	Off	Off	On	On	On	39
Off	Off	On	Off	On	Off	Off	Off	40
Off	Off	On	Off	On	Off	On	Off	41
Off	Off	On	Off	On	Off	On	On	42
Off	Off	On	Off	On	Off	On	On	43
Off	Off	On	Off	On	On	Off	Off	44
Off	Off	On	Off	On	On	Off	On	45
Off	Off	On	Off	On	On	On	Off	46
Off	Off	On	Off	On	On	On	On	47
Off	Off	On	On	Off	Off	Off	Off	48
Off	Off	On	On	Off	Off	Off	On	49
Off	Off	On	On	Off	Off	On	Off	50
Off	Off	On	On	Off	Off	On	On	51
Off	Off	On	On	Off	On	Off	Off	52
Off	Off	On	On	Off	On	Off	On	53
Off	Off	On	On	Off	On	On	Off	54
Off	Off	On	On	Off	On	On	On	55
Off	Off	On	On	On	Off	Off	Off	56
Off	Off	On	On	On	Off	Off	On	57
Off	Off	On	On	On	Off	On	Off	58
Off	Off	On	On	On	Off	On	On	59
Off	Off	On	On	On	On	Off	Off	60
Off	Off	On	On	On	On	Off	On	61
Off	Off	On	On	On	On	On	Off	62
Off	Off	On	On	On	On	On	On	63
Off	On	Off	Off	Off	Off	Off	Off	64
Off	On	Off	Off	Off	Off	Off	On	65
Off	On	Off	Off	Off	Off	On	Off	66
Off	On	Off	Off	Off	Off	On	On	67
Off	On	Off	Off	Off	On	Off	Off	68
Off	On	Off	Off	Off	On	Off	On	69
Off	On	Off	Off	Off	On	On	Off	70
Off	On	Off	Off	Off	On	On	On	71
Off	On	Off	Off	On	Off	Off	Off	72
Off	On	Off	Off	On	Off	Off	On	73
Off	On	Off	Off	On	Off	On	Off	74
Off	On	Off	Off	On	Off	On	On	75
Off	On	Off	Off	On	On	Off	Off	76
Off	On	Off	Off	On	On	Off	On	77
Off	On	Off	Off	On	On	On	Off	78
Off	On	Off	Off	On	On	On	On	79

A7	A6	A5	A4	A3	A2	A1	A0	Address
Off	On	Off	On	Off	Off	Off	Off	80
Off	On	Off	On	Off	Off	Off	On	81
Off	On	Off	On	Off	Off	On	Off	82
Off	On	Off	On	Off	Off	On	On	83
Off	On	Off	On	Off	On	Off	Off	84
Off	On	Off	On	Off	On	Off	On	85
Off	On	Off	On	Off	On	On	Off	86
Off	On	Off	On	Off	On	On	On	87
Off	On	Off	On	On	Off	Off	Off	88
Off	On	Off	On	On	Off	Off	On	89
Off	On	Off	On	On	Off	On	Off	90
Off	On	Off	On	On	Off	On	On	91
Off	On	Off	On	On	On	Off	Off	92
Off	On	Off	On	On	On	Off	On	93
Off	On	Off	On	On	On	On	Off	94
Off	On	Off	On	On	On	On	On	95
Off	On	On	Off	Off	Off	Off	Off	96
Off	On	On	Off	Off	Off	Off	On	97
Off	On	On	Off	Off	Off	On	Off	98
Off	On	On	Off	Off	Off	On	On	99
Off	On	On	Off	Off	On	Off	Off	100
Off	On	On	Off	Off	On	Off	On	101
Off	On	On	Off	Off	On	On	Off	102
Off	On	On	Off	Off	On	On	On	103
Off	On	On	Off	On	Off	Off	Off	104
Off	On	On	Off	On	Off	Off	On	105
Off	On	On	Off	On	Off	On	Off	106
Off	On	On	Off	On	Off	On	On	107
Off	On	On	Off	On	On	Off	Off	108
Off	On	On	Off	On	On	Off	On	109
Off	On	On	Off	On	On	On	Off	110
Off	On	On	Off	On	On	On	On	111
Off	On	On	On	Off	Off	Off	Off	112
Off	On	On	On	Off	Off	Off	On	113
Off	On	On	On	Off	Off	On	Off	114
Off	On	On	On	Off	Off	On	On	115
Off	On	On	On	Off	On	Off	Off	116
Off	On	On	On	Off	On	Off	On	117
Off	On	On	On	Off	On	On	Off	118
Off	On	On	On	Off	On	On	On	119
Off	On	On	On	On	Off	Off	Off	120

A7	A6	A5	A4	A3	A2	A1	A0	Address
Off	On	On	On	On	Off	Off	Off	120
Off	On	On	On	On	Off	Off	On	121
Off	On	On	On	On	Off	On	Off	122
Off	On	On	On	On	Off	On	On	123
Off	On	On	On	On	On	Off	Off	124
Off	On	On	On	On	On	Off	On	125
Off	On	On	On	On	On	On	Off	126
Off	On	On	On	On	On	On	On	127
On	Off	Off	Off	Off	Off	Off	Off	128
On	Off	Off	Off	Off	Off	Off	On	129
On	Off	Off	Off	Off	Off	On	Off	130
On	Off	Off	Off	Off	Off	On	On	131
On	Off	Off	Off	Off	On	Off	Off	132
On	Off	Off	Off	Off	On	Off	On	133
On	Off	Off	Off	Off	On	On	Off	134
On	Off	Off	Off	Off	On	On	On	135
On	Off	Off	Off	On	Off	Off	Off	136
On	Off	Off	Off	On	Off	Off	On	137
On	Off	Off	Off	On	Off	On	Off	138
On	Off	Off	Off	On	Off	On	On	139
On	Off	Off	Off	On	On	Off	Off	140
On	Off	Off	Off	On	On	Off	On	141
On	Off	Off	Off	On	On	On	Off	142
On	Off	Off	Off	On	On	On	On	143
On	Off	Off	On	Off	Off	Off	Off	144
On	Off	Off	On	Off	Off	Off	On	145
On	Off	Off	On	Off	Off	On	Off	146
On	Off	Off	On	Off	Off	On	On	147
On	Off	Off	On	Off	On	Off	Off	148
On	Off	Off	On	Off	On	Off	On	149
On	Off	Off	On	Off	On	On	Off	150
On	Off	Off	On	Off	On	On	On	151
On	Off	Off	On	On	Off	Off	Off	152
On	Off	Off	On	On	Off	Off	On	153
On	Off	Off	On	On	Off	On	Off	154
On	Off	Off	On	On	Off	On	On	155
On	Off	Off	On	On	On	Off	Off	156
On	Off	Off	On	On	On	Off	On	157
On	Off	Off	On	On	On	On	Off	158
On	Off	Off	On	On	On	On	On	159
On	Off	On	Off	Off	Off	Off	Off	160

A7	A6	A5	A4	A3	A2	A1	A0	Address
On	Off	On	Off	Off	Off	Off	On	161
On	Off	On	Off	Off	Off	On	Off	162
On	Off	On	Off	Off	Off	On	On	163
On	Off	On	Off	Off	On	Off	Off	164
On	Off	On	Off	Off	On	Off	On	165
On	Off	On	Off	Off	On	On	Off	166
On	Off	On	Off	Off	On	On	On	167
On	Off	On	Off	On	Off	Off	Off	168
On	Off	On	Off	On	Off	Off	On	169
On	Off	On	Off	On	Off	On	Off	170
On	Off	On	Off	On	Off	On	On	171
On	Off	On	Off	On	On	Off	Off	172
On	Off	On	Off	On	On	Off	On	173
On	Off	On	Off	On	On	On	Off	174
On	Off	On	Off	On	On	On	On	175
On	Off	On	On	Off	Off	Off	Off	176
On	Off	On	On	Off	Off	Off	On	177
On	Off	On	On	Off	Off	On	Off	178
On	Off	On	On	Off	Off	On	On	179
On	Off	On	On	Off	On	Off	Off	180
On	Off	On	On	Off	On	Off	On	181
On	Off	On	On	Off	On	On	Off	182
On	Off	On	On	Off	On	On	On	183
On	Off	On	On	On	Off	Off	Off	184
On	Off	On	On	On	Off	Off	On	185
On	Off	On	On	On	Off	On	Off	186
On	Off	On	On	On	Off	On	On	187
On	Off	On	On	On	On	Off	Off	188
On	Off	On	On	On	On	Off	On	189
On	Off	On	On	On	On	On	Off	190
On	Off	On	On	On	On	On	On	191
On	On	Off	Off	Off	Off	Off	Off	192
On	On	Off	Off	Off	Off	Off	On	193
On	On	Off	Off	Off	Off	On	Off	194
On	On	Off	Off	Off	Off	On	On	195
On	On	Off	Off	Off	On	Off	Off	196
On	On	Off	Off	Off	On	Off	On	197
On	On	Off	Off	Off	On	On	Off	198
On	On	Off	Off	Off	On	On	On	199
On	On	Off	Off	On	Off	Off	Off	200
On	On	Off	Off	On	Off	Off	On	201

A7	A6	A5	A4	A3	A2	A1	A0	Address
On	On	Off	Off	On	Off	On	Off	202
On	On	Off	Off	On	Off	On	On	203
On	On	Off	Off	On	On	Off	Off	204
On	On	Off	Off	On	On	Off	On	205
On	On	Off	Off	On	On	On	Off	206
On	On	Off	Off	On	On	On	On	207
On	On	Off	On	Off	Off	Off	Off	208
On	On	Off	On	Off	Off	Off	On	209
On	On	Off	On	Off	Off	On	Off	210
On	On	Off	On	Off	Off	On	On	211
On	On	Off	On	Off	On	Off	Off	212
On	On	Off	On	Off	On	Off	On	213
On	On	Off	On	Off	On	On	Off	214
On	On	Off	On	Off	On	On	On	215
On	On	Off	On	On	Off	Off	Off	216
On	On	Off	On	On	Off	Off	On	217
On	On	Off	On	On	Off	On	Off	218
On	On	Off	On	On	Off	On	On	219
On	On	Off	On	On	On	Off	Off	220
On	On	Off	On	On	On	Off	On	221
On	On	Off	On	On	On	On	Off	222
On	On	Off	On	On	On	On	On	223
On	On	On	Off	Off	Off	Off	Off	224
On	On	On	Off	Off	Off	Off	On	225
On	On	On	Off	Off	Off	On	Off	226
On	On	On	Off	Off	Off	On	On	227
On	On	On	Off	Off	On	Off	Off	228
On	On	On	Off	Off	On	Off	On	229
On	On	On	Off	Off	On	On	Off	230
On	On	On	Off	Off	On	On	On	231
On	On	On	Off	On	Off	Off	Off	232
On	On	On	Off	On	Off	Off	On	233
On	On	On	Off	On	Off	On	Off	234
On	On	On	Off	On	Off	On	On	235
On	On	On	Off	On	On	Off	Off	236
On	On	On	Off	On	On	Off	On	237
On	On	On	Off	On	On	On	Off	238
On	On	On	Off	On	On	On	On	239
On	On	On	On	Off	Off	Off	Off	240
On	On	On	On	Off	Off	Off	On	241
On	On	On	On	Off	Off	On	Off	242

---

<b>A7</b>	<b>A6</b>	<b>A5</b>	<b>A4</b>	<b>A3</b>	<b>A2</b>	<b>A1</b>	<b>A0</b>	<b>Address</b>
On	On	On	On	Off	Off	On	On	243
On	On	On	On	Off	On	Off	Off	244
On	On	On	On	Off	On	Off	On	245
On	On	On	On	Off	On	On	Off	246
On	On	On	On	Off	On	On	On	247
On	On	On	On	On	Off	Off	Off	248
On	On	On	On	On	Off	Off	On	249
On	On	On	On	On	Off	On	Off	250
On	On	On	On	On	Off	On	On	251
On	On	On	On	On	On	Off	Off	252
On	On	On	On	On	On	Off	On	253
On	On	On	On	On	On	On	Off	254
On	On	On	On	On	On	On	On	255



## Appendix C. Specifications

### Appendix C.1. Specifications



	ProtoNode RER	ProtoNode LER
<b>Electrical Connections</b>	One 6-pin Phoenix connector, one RS-485 +/- ground port, power +/- frame ground port One 3-pin RS-485 Phoenix connector, one RS-485 +/- ground port One Ethernet-10/100 Ethernet port	One 6-pin Phoenix connector, one RS-485 +/- ground port, power +/- frame ground port One Ethernet 10/100 BaseT port One FTT-10 LonWorks port
<b>Approvals</b>	Pending CE (EN55022;EN55024; EN60950), UL916, Pending FCC Class A Part 15, DNP3 Conformance Tested, OPC Self-tested for Compliance, RoHS Compliant, CSA 205 Approved	
	BTL Marked	LonMark Certified
<b>Power Requirements</b>	Multi-mode power adapter: 9-30VDC or 12 - 24VACC	
<b>Physical Dimensions</b>	11.5 cm L x 8.3 cm W x 4.1 cm H (4.5 x 3.2 x 1.6 in.)	
<b>Weight</b>	0.2 kg (0.4 lbs)	
<b>Operating Temperature</b>	-40°C to 75°C (-40°F to 167°F)	
<b>Surge Suppression</b>	EN61000-4-2 ESD EN61000-4-3 EMC EN61000-4-4 EFT	
<b>Humidity</b>	5 - 90% RH (non-condensing)	
(Specifications subject to change without notice)		

### Compliance with UL Regulations

For UL compliance, the following instructions must be met when operating the ProtoNode.

- The units shall be powered by listed LPS or Class 2 power supply suited to the expected operating temperature range.
- The interconnecting power connector and power cable shall:
  - Comply with local electrical code.
  - Be suited to the expected operating temperature range.
  - Meet the current and voltage rating for the ProtoNode/Net
- Furthermore, the interconnecting power cable shall:
  - Be of length not exceeding 3.05m (118.3")
  - Be constructed of materials rated VW-1 or FT-1 or better
- If the unit is to be installed in an operating environment with a temperature above 65 °C, it should be installed in a Restricted Access Area requiring a key or a special tool to gain access
- This device must not be connected to a LAN segment with outdoor wiring.

---

## **Limited 2 year Warranty**

FieldServer Technologies warrants its products to be free from defects in workmanship or material under normal use and service for two years after date of shipment. FieldServer Technologies will repair or replace any equipment found to be defective during the warranty period. Final determination of the nature and responsibility for defective or damaged equipment will be made by FieldServer Technologies personnel.

All warranties hereunder are contingent upon proper use in the application for which the product was intended and do not cover products which have been modified or repaired without FieldServer Technologies approval or which have been subjected to accident, improper maintenance, installation or application, or on which original identification marks have been removed or altered. This Limited Warranty also will not apply to interconnecting cables or wires, consumables or to any damage resulting from battery leakage.

In all cases FieldServer Technology's responsibility and liability under this warranty shall be limited to the cost of the equipment. The purchaser must obtain shipping instructions for the prepaid return of any item under this warranty provision and compliance with such instruction shall be a condition of this warranty.

Except for the express warranty stated above, FieldServer Technologies disclaims all warranties with regard to the products sold hereunder including all implied warranties of merchantability and fitness and the express warranties stated herein are in lieu of all obligations or liabilities on the part of FieldServer Technologies for damages including, but not limited to, consequential damages arising out of/or in connection with the use or performance of the product.

---

---



**[www.raypak.com](http://www.raypak.com)**

Raypak, Inc., 2151 Eastman Avenue, Oxnard, CA 93030 (805) 278-5300 Fax (805) 278-9725  
Litho in U.S.A.